

## GMC 6L80 Wiring

### Connection using Factory Mode


## Attention

**You cannot use OBD Flash files to write into the ECU**



GMC-6L80-Module

You don't need to open 6L80 cover in this factory mode. Please connect wires as described below

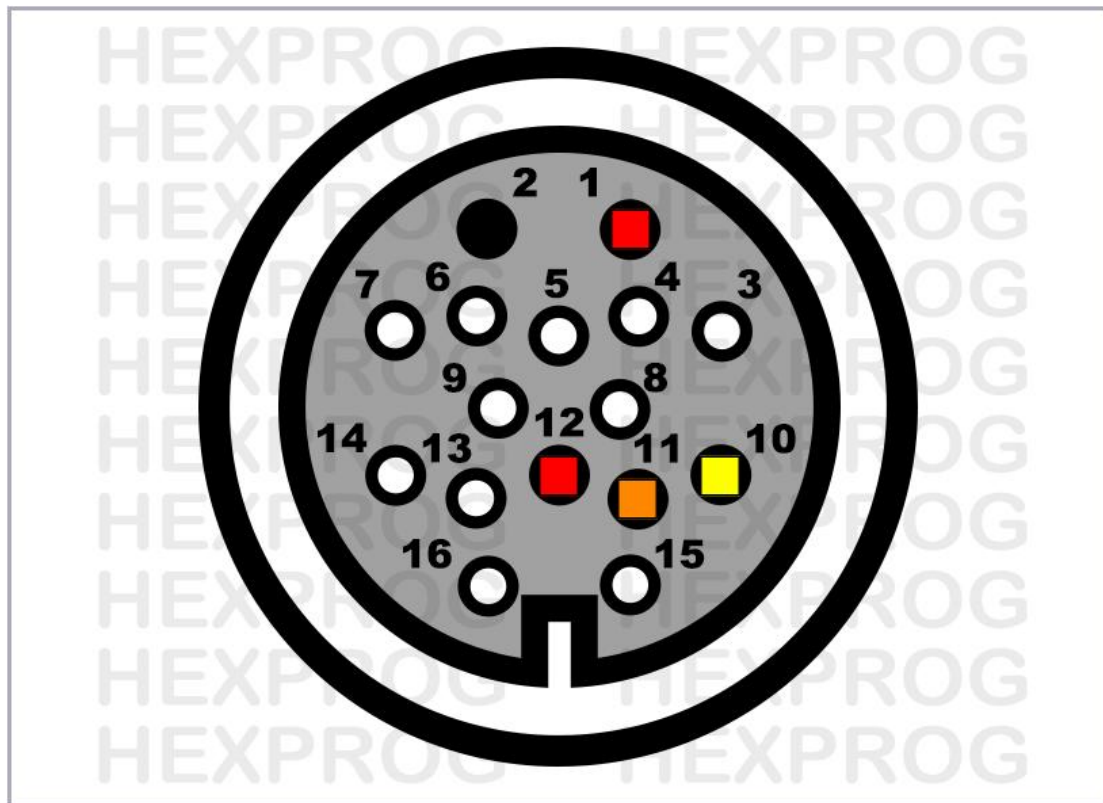

### Pins Description

- Block1-Pin 1: Power Supply 12-14V
- Block1-Pin 10: CANBUS High 2
- Block1-Pin 11: CANBUS Low 2
- Block1-Pin 12: Power Supply 12-14V
- Block1-Pin 2: Ground