

UAZ 6L50 Wiring

Connection using Factory Mode


Attention

You cannot use OBD Flash files to write into the ECU



UAZ-6L50-Module

You don't need to open 6L50 cover in this factory mode. Please connect wires as described below

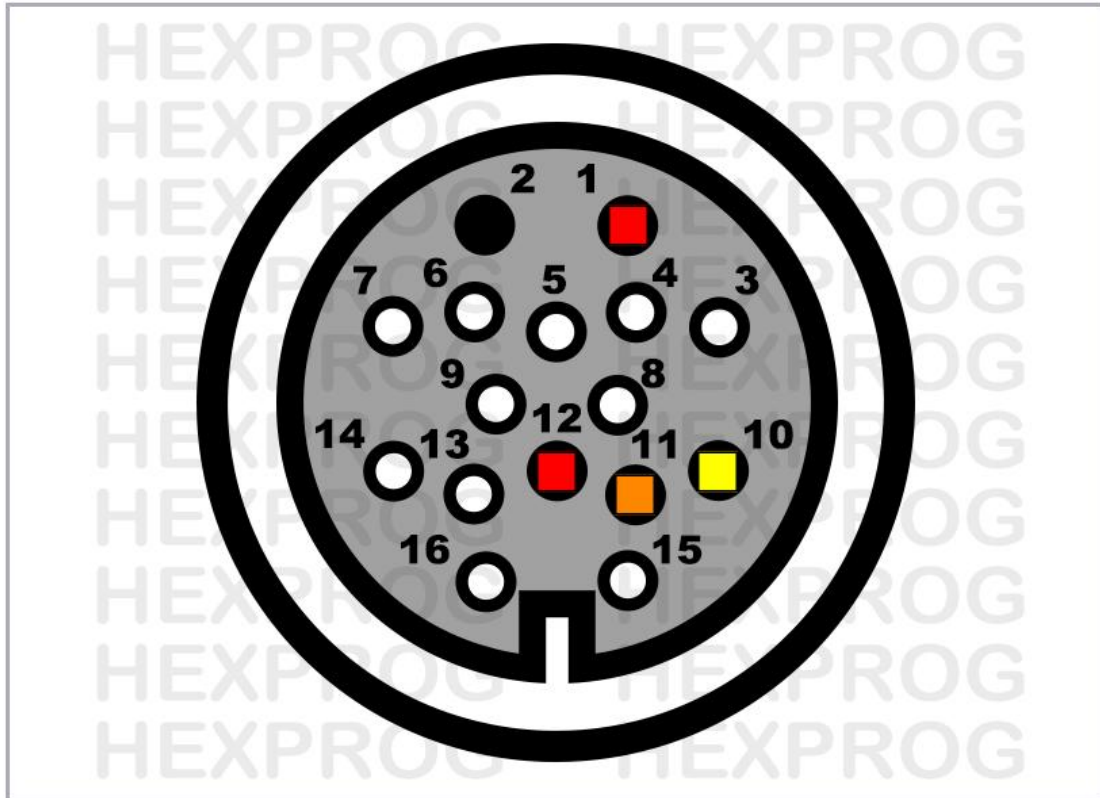

Pins Description

- Block1-Pin 1: Power Supply 12-14V
- Block1-Pin 10: CANBUS High 2
- Block1-Pin 11: CANBUS Low 2
- Block1-Pin 12: Power Supply 12-14V
- Block1-Pin 2: Ground