

GMC E82 Wiring

Connection using Boot Mode


Attention

You cannot use OBD Flash files to write into the ECU



GMC-E82-Module

You need to open E82 cover in boot mode. Please connect wires as described below

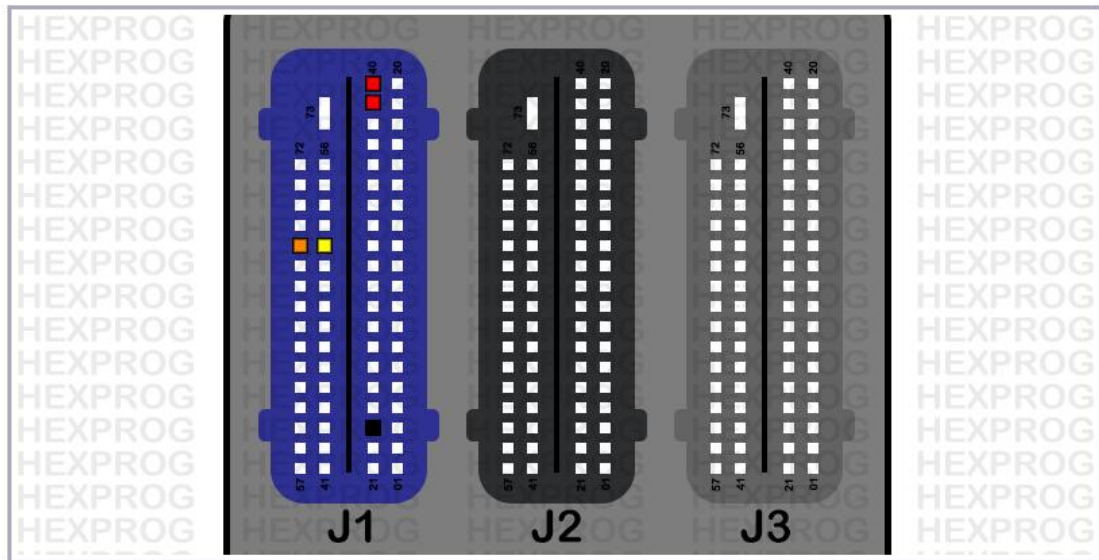

Pins Description

- Block J1-**Pin 23**: Ground
- Block J1-**Pin 39**: Power Supply 12-14V
- Block J1-**Pin 40**: Power Supply 12-14V
- Block J1-**Pin 52**: CANBUS High 2
- Block J1-**Pin 68**: CANBUS Low 2

Internal Wiring

Connect HexProg signals wires to E82 board as shown below



GMC-E82-Inside



GMC-E82-Boot-Location