



ACSM4 BDM WIRING

1. Unplug ACSM4 from the car (Careless Removal of the module may cause a damage to the car or the control itself, it must be carried under user's RISK)
2. Remove ACSM4 board from the casing

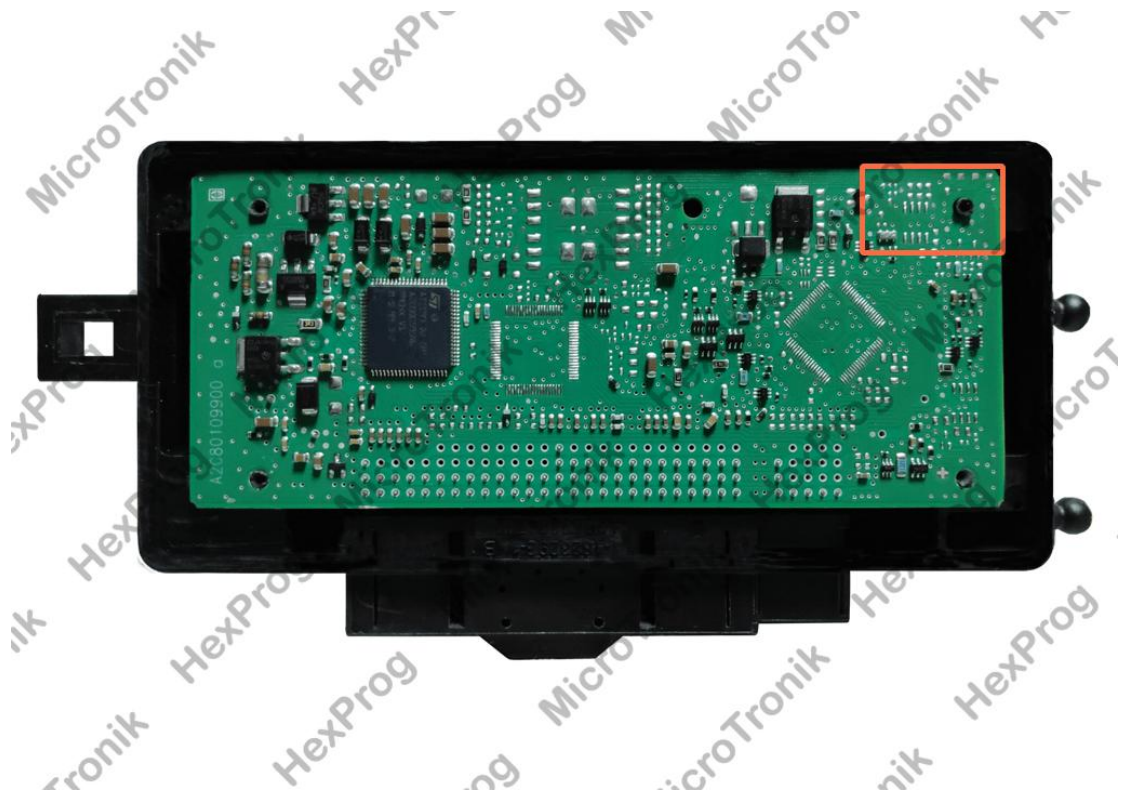

ACSM4

3. Solder wires to ACSM4 based on the below connection diagram using BDM cable

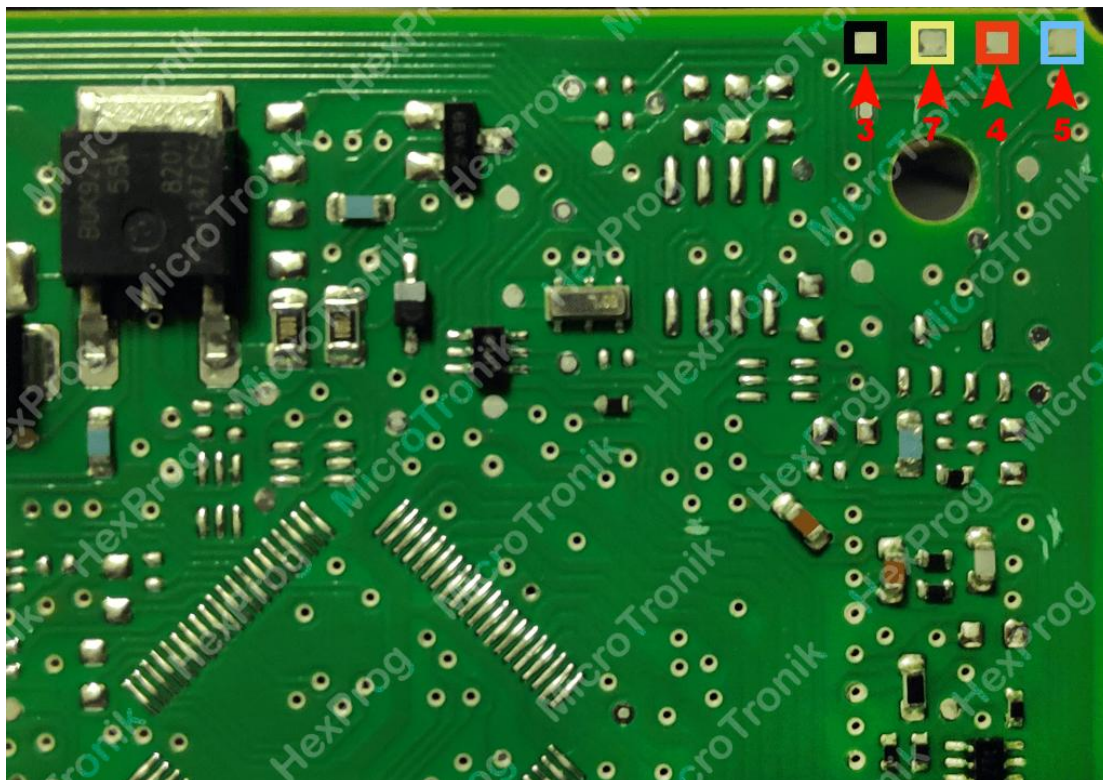

acsm4 Wiring

4. Select the ACSM4/CPU version from HexProg software
5. Do the desired function for read/write ACSM4 in Software
6. Unsolder wires
7. Connect ACSM4 back to car

