


LandRover BCM XEP768 and XEP100

1. Unplug BCM from the car (Careless Removal of the module may cause a damage to the car or the control itself, it must be carried under user's RISK)
2. Remove BCM board from the casing



LandRover BCM

3. Solder wires to BCM based on the below connection diagram using BDM cable

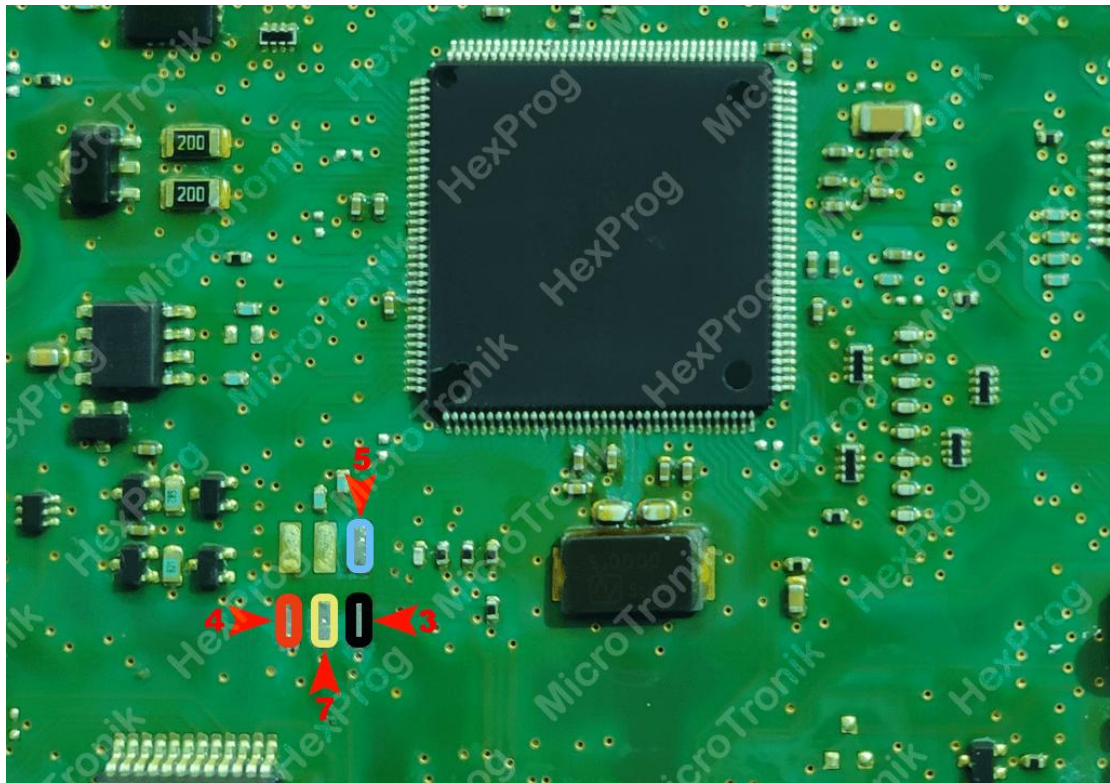

LandRover BCM wiring

4. Select the BCM/CPU version from HexProg software
5. Do the function for read/write BCM in Software
6. Unsolder wires
7. Connect BCM back to car

