



BSI Mask 4L91N BDM WIRING

1. Unplug BSI from the car (Careless Removal of the module may cause a damage to the car or the control itself, it must be carried under user's RISK)
2. Remove BSI board from the casing

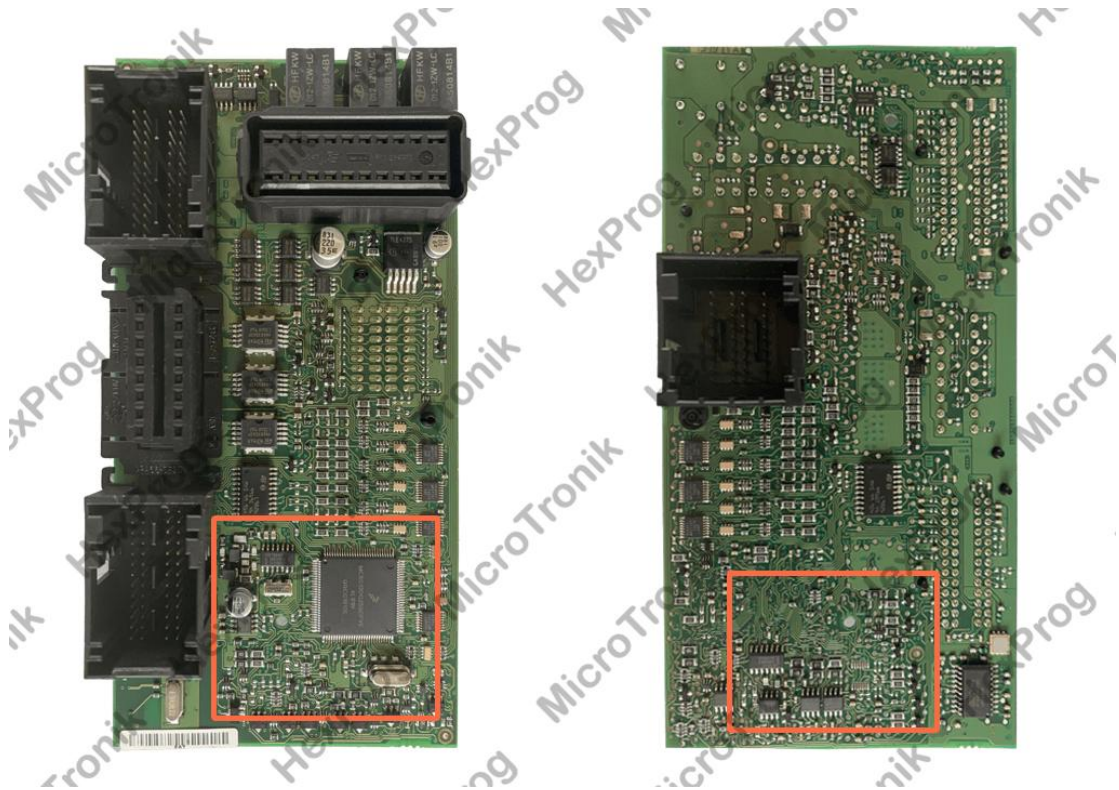


BSI PCB

3. Solder wires to BSI based on the below connection diagram using BDM cable

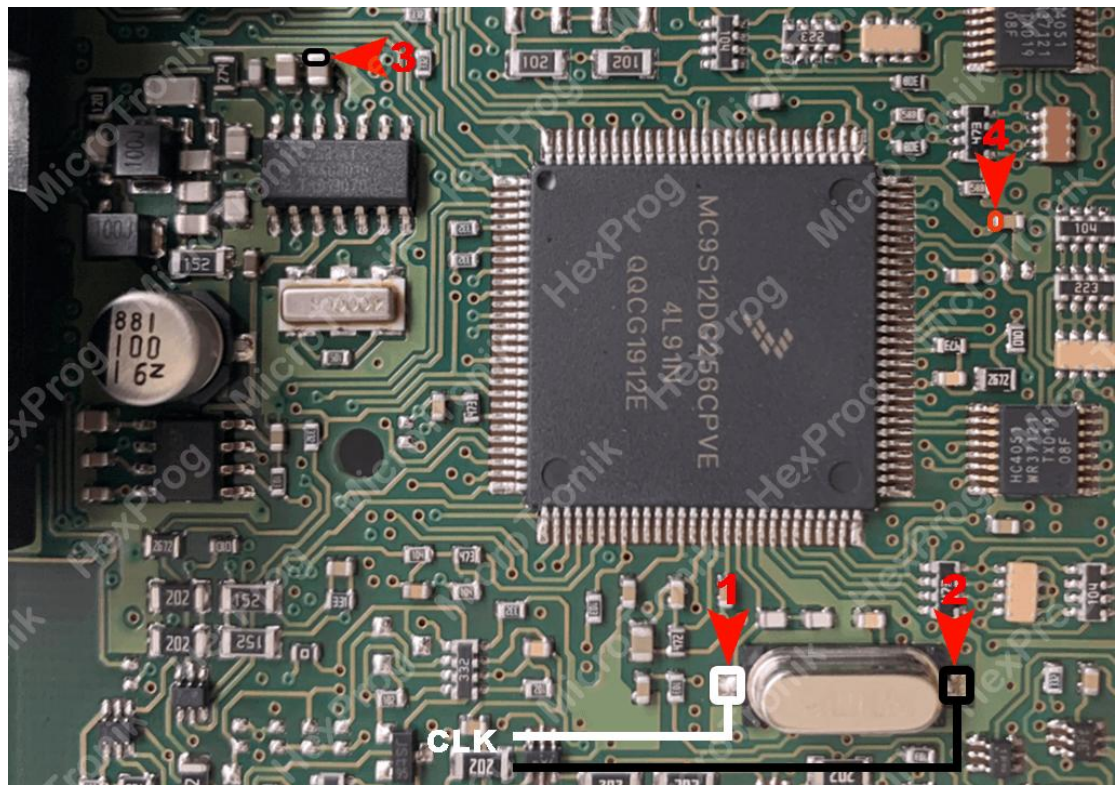

BSI Wiring front

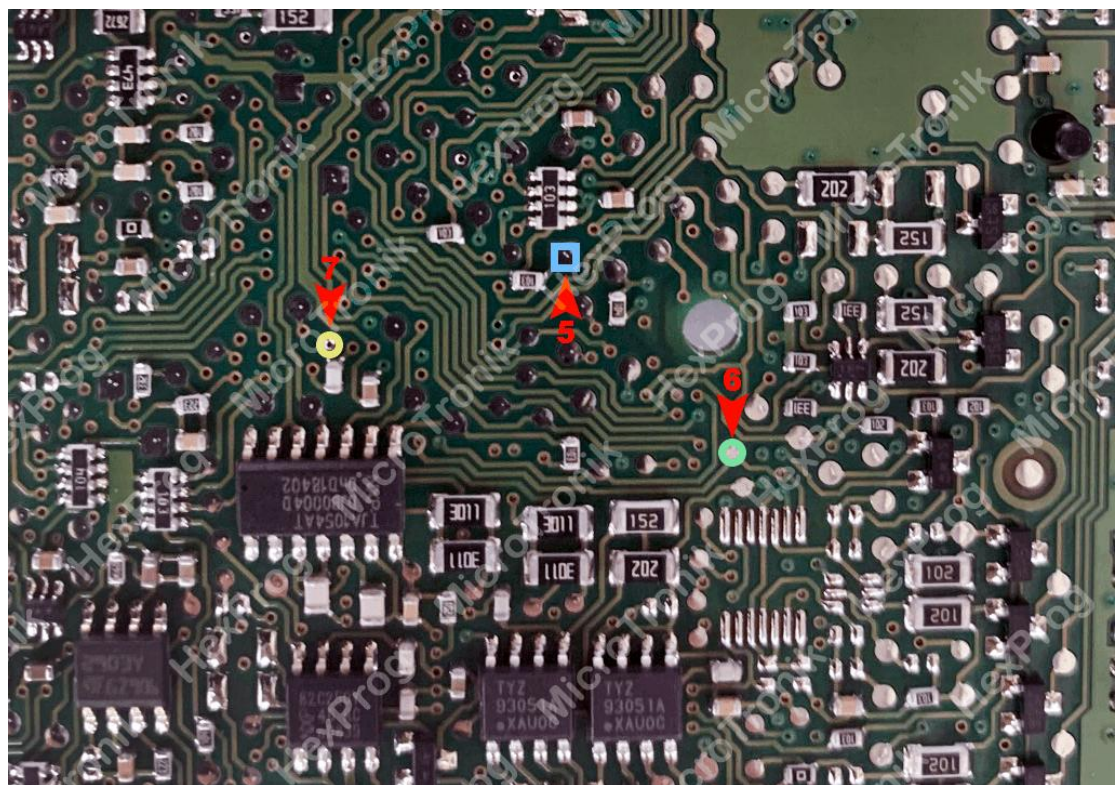

BSI Wiring rear

4. Select the BSI/CPU version from HexProg software
5. Do the desired function for read/write BSI in Software
6. Unsolder wires
7. Connect BSI back to car

