


Mitsubishi ME7.7.1 Wiring

Connection using Boot Mode

Attention

You cannot use OBD Flash files to write into the ECU

Please contact Microtonik to help you in arranging the boot location of **ME7.7.1**

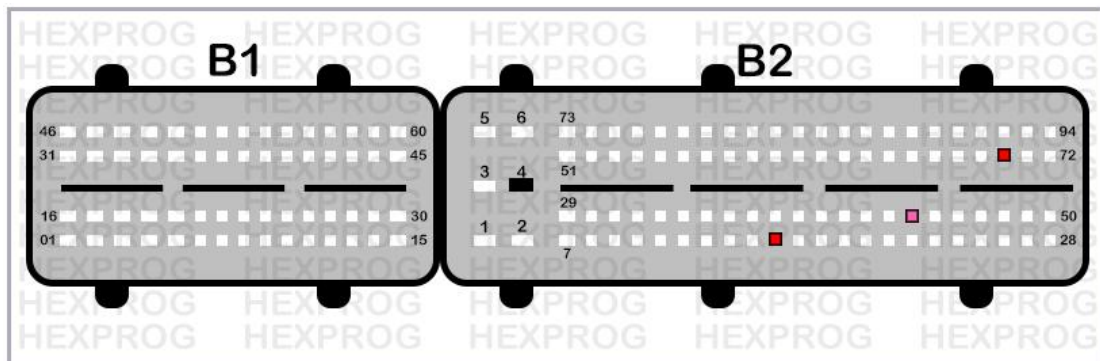

Pins Description

- Block2-Pin 16: Power Supply 12-14V
- Block2-Pin 4: Ground
- Block2-Pin 44: K-Line Signal
- Block2-Pin 70: Power Supply 12-14V