

FIAT ZF ES11-10xx Wiring

Connection using Boot Mode


Attention

You cannot use OBD Flash files to write into the ECU



FIAT-ZF ES11-10xx-Module

You need to open ZF ES11-10xx cover in boot mode. Please connect wires as described below

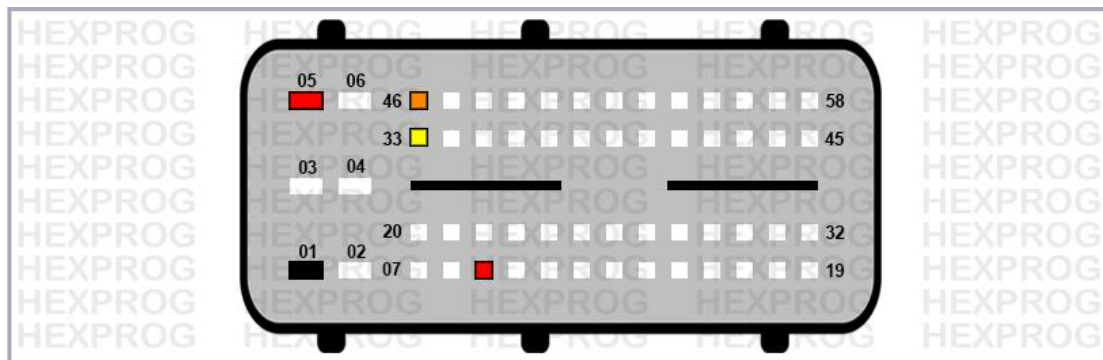

Pins Description


- Block1-**Pin 01**: Ground
- Block1-**Pin 05**: Power Supply 12-14V
- Block1-**Pin 09**: Power Supply 12-14V
- Block1-**Pin 33**: CANBUS High 2
- Block1-**Pin 46**: CANBUS Low 2

Internal Wiring

Connect HexProg signals wires to ZF ES11-10xx board as shown below



FIAT-ZF ES11-10xx-Inside

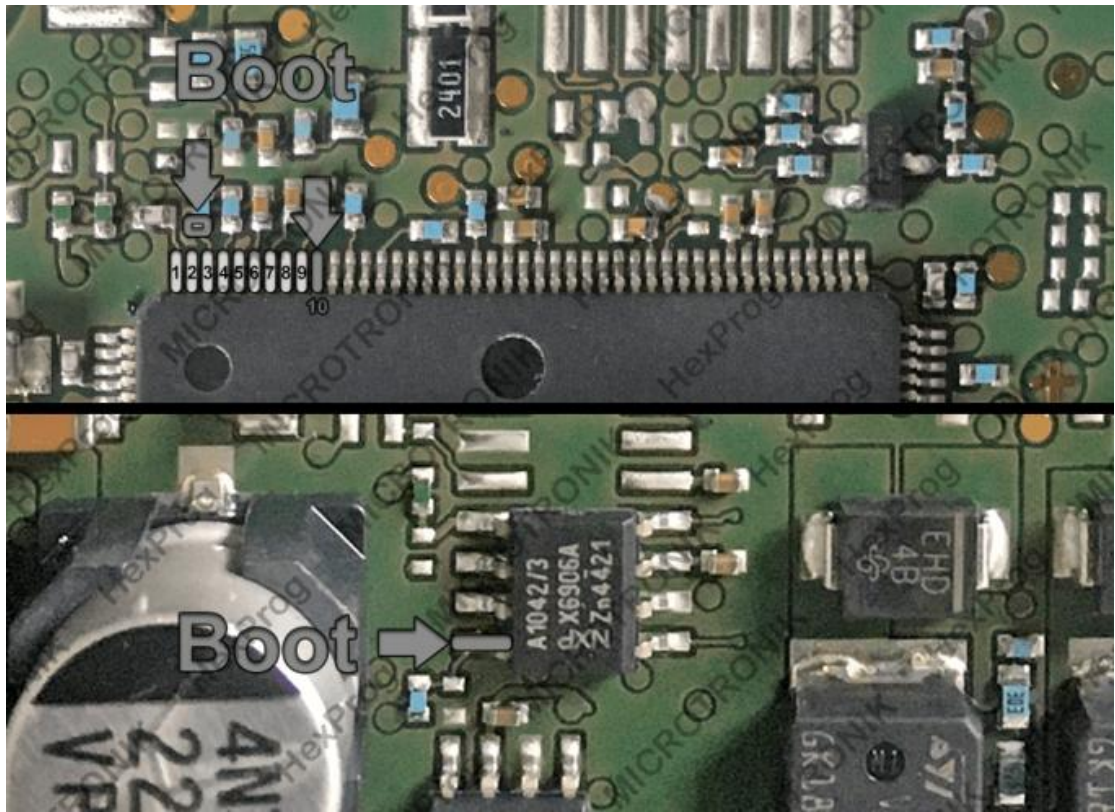

FIAT-ZF ES11-10xx-Boot-Location