


ESL J518 Mask 1L59W 3L40K BDM WIRING

1. Unplug ESL from the car (Careless Removal of the module may cause a damage to the car or the control itself, it must be carried under user's RISK)
2. Remove ESL board from the casing



ESL Mask 1L59W 3L40K

3. Solder wires to ESL based on the below connection diagram using BDM cable

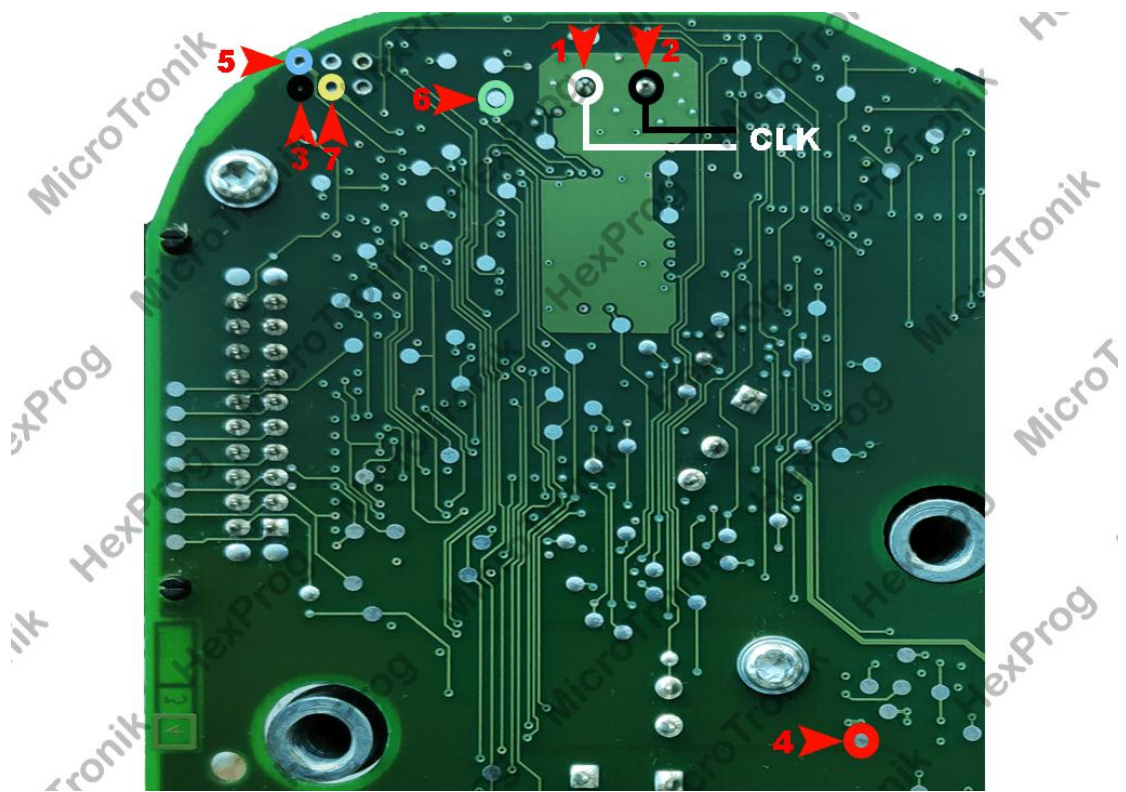

ESL Mask 1L59W 3L40K wiring

4. Select the ESL J518/CPU version from HexProg software
5. Do the desired function for read/write ESL in Software
6. Unsolder wires
7. Connect ESL back to car

