



# KBM BDM WIRING

1. Unplug KBM from the car (Careless Removal of the module may cause a damage to the car or the control itself, it must be carried under user's RISK)
2. Remove KBM board from the casing

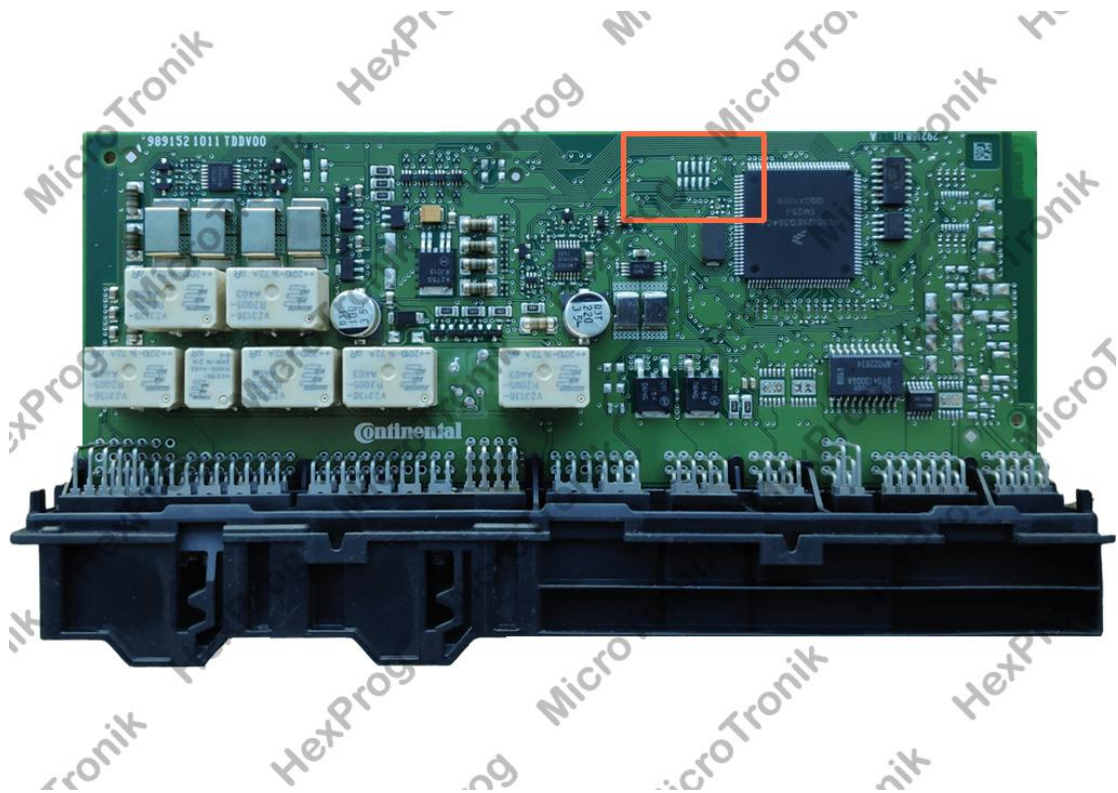

KBM

3. Solder wires to KBM based on the below connection diagram using BDM cable

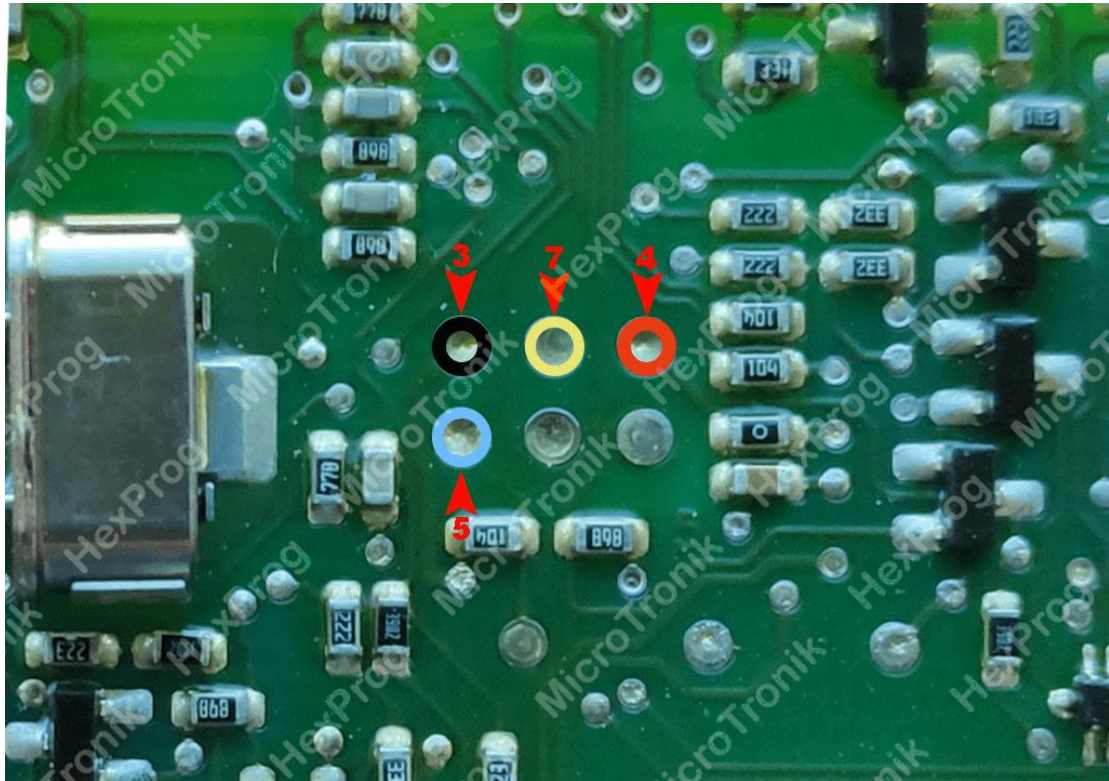

### KBM Wiring

4. Select the KBM/CPU version from HexProg software
5. Do the desired function for read/write KBM in Software
6. Unsolder wires
7. Connect KBM back to car

