



Land Rover KVM BDM WIRING

1. Unplug KVM from the car (Located under rear boot trim panel. Careless Removal of the module may cause a damage to the car or the control itself, it must be carried under user's RISK)
2. Remove KVM board from the casing

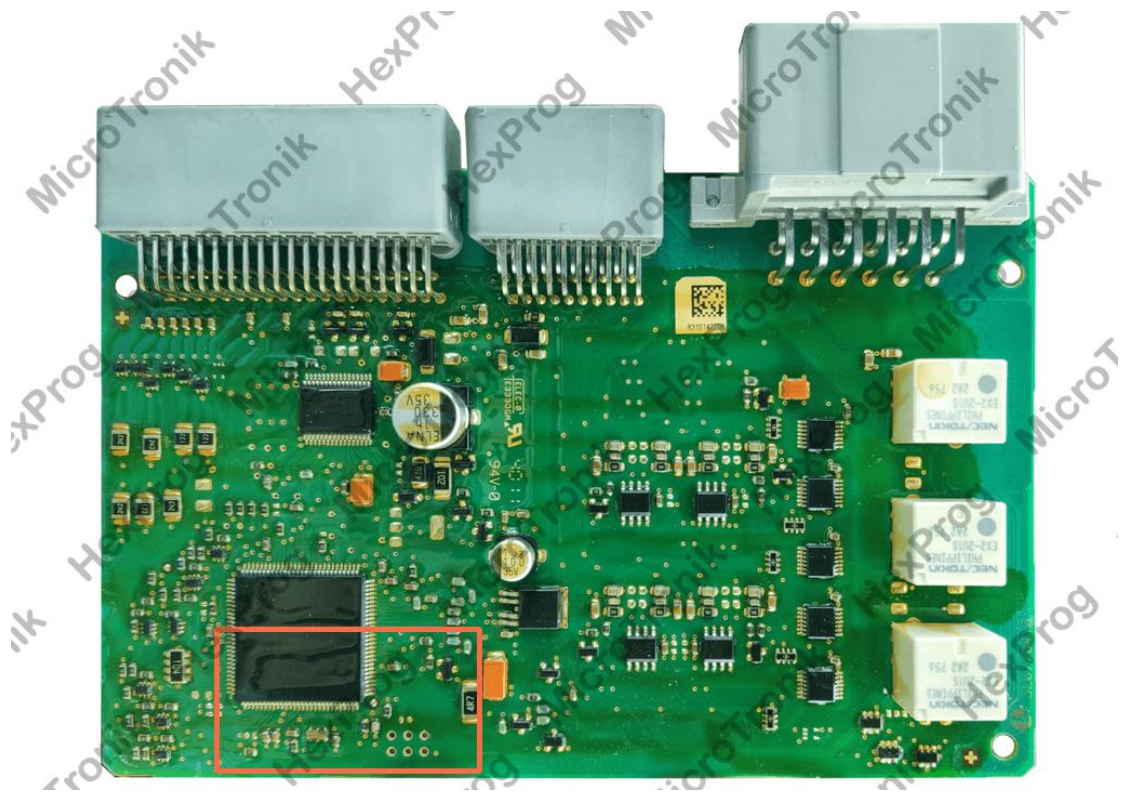

KVM

1. Solder wires to KVM based on the below connection diagram using BDM cable

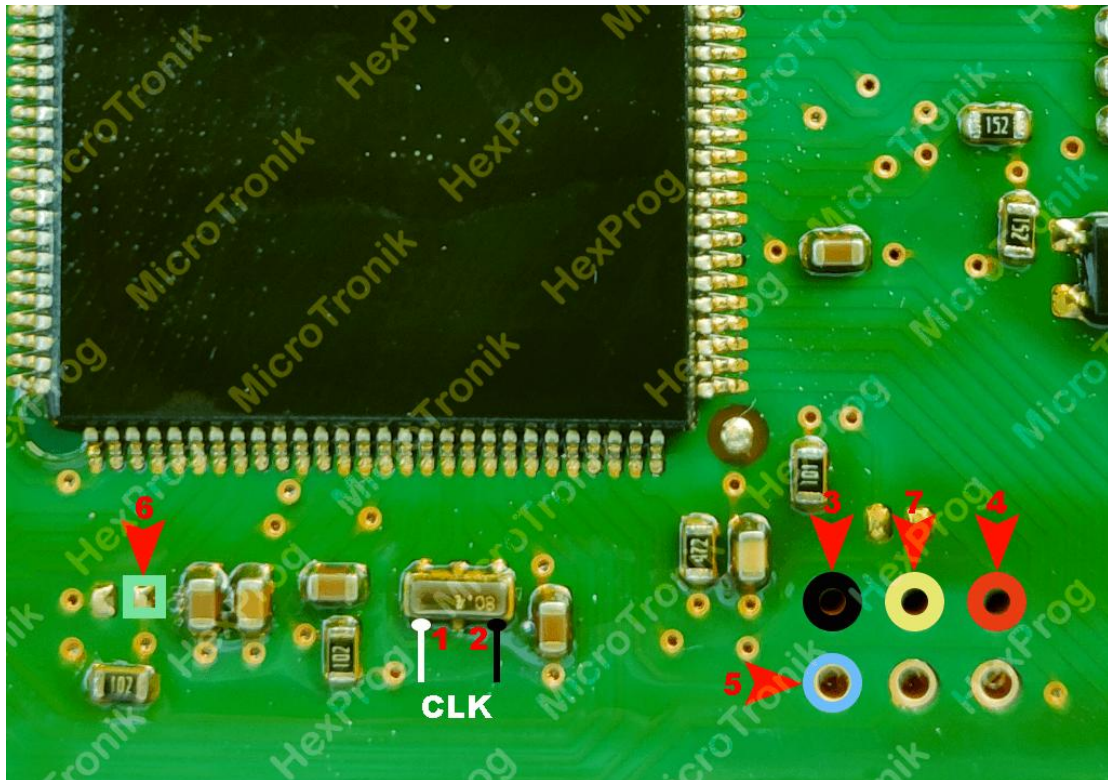

KVM Wiring

1. Select the KVM /CPU version from HexProg software
2. Do the desired function for read/write KVM in Software
3. Unsolder wires
4. Connect KVM back to car

