



SM BDM WIRING

1. Unplug Seat Module from the car (Careless Removal of the module may cause a damage to the car or the control itself, it must be carried under user's RISK)
2. Remove Seat Module board from the casing

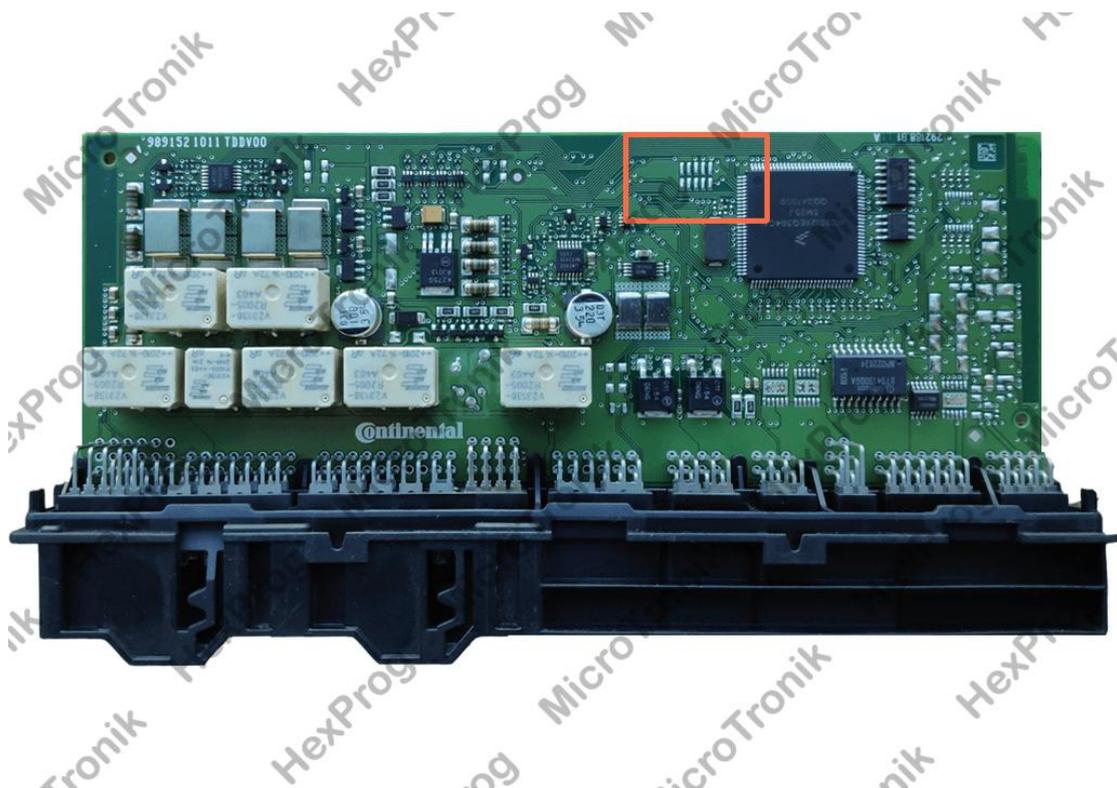

Seat Module

3. Solder wires to Seat Module based on the below connection diagram using BDM cable

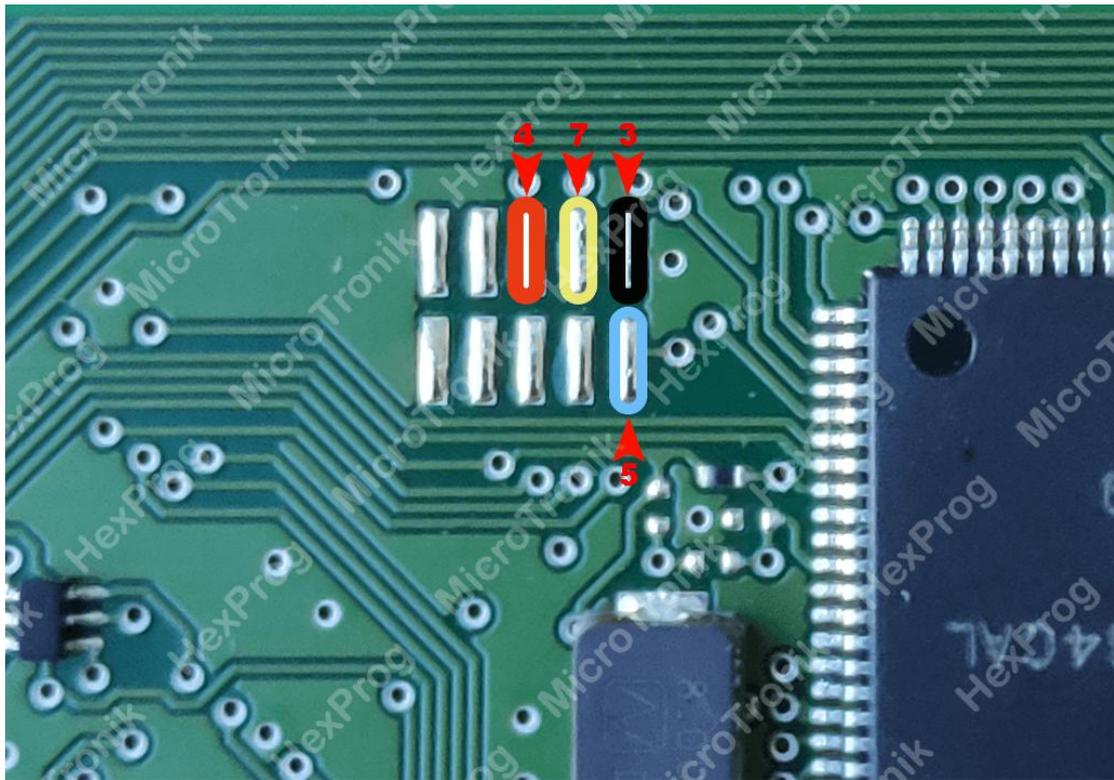

Seat Module Wiring

4. Select the SM/CPU version from HexProg software
5. Do the desired function for read/write Seat Module in Software
6. Unsolder wires
7. Connect Seat Module back to car

