


SZL BDM WIRING

1. Unplug SZL from the car (Careless Removal of the module may cause a damage to the car or the control itself, it must be carried under user's RISK)
2. Remove SZL board from the casing

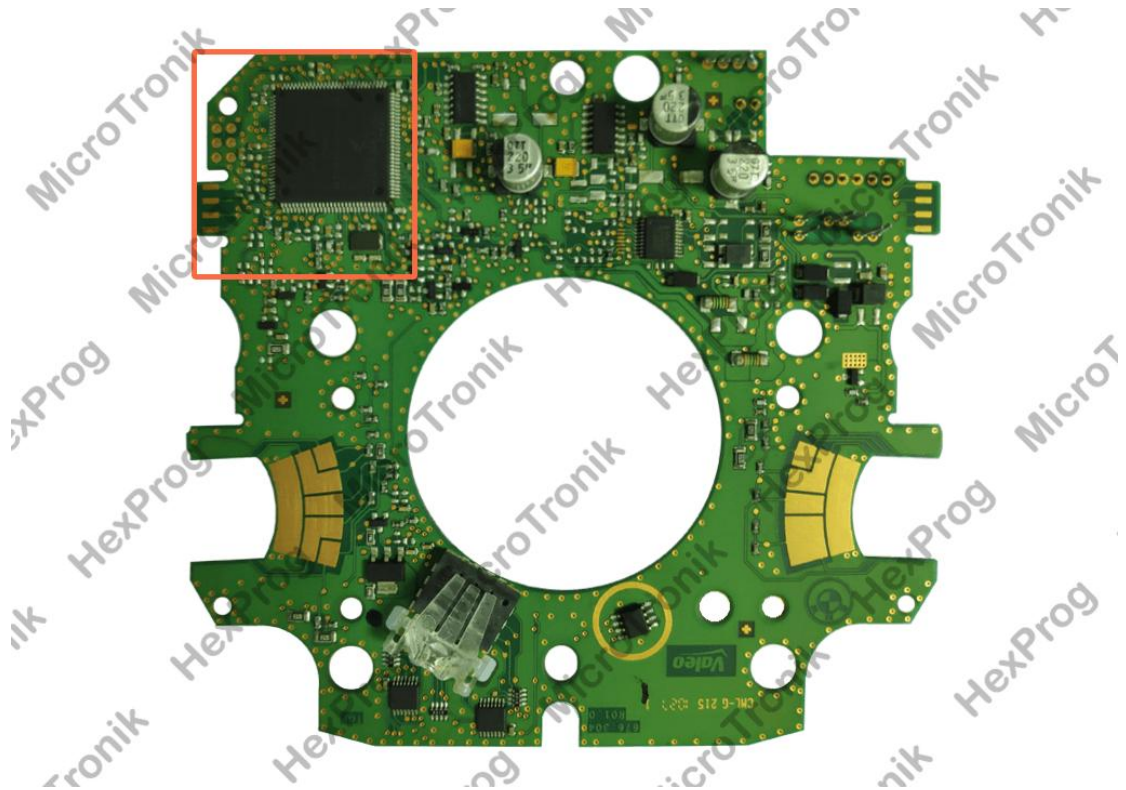

SZL F-Series

3. Solder wires to SZL based on the below connection diagram using BDM cable



EIZ F-Series Wiring

4. Select the SZL/CPU version from HexProg software
5. Do the desired function for read/write SZL in Software
6. Unsolder wires
7. Connect SZL back to car

