Seat DQ200 Wiring

**Connection using Factory Mode** 


## Attention

## You cannot use OBD Flash files to write into the ECU



Seat-DQ200-Module

You don't need to open DQ200 cover in this factory mode. Please connect wires as described below

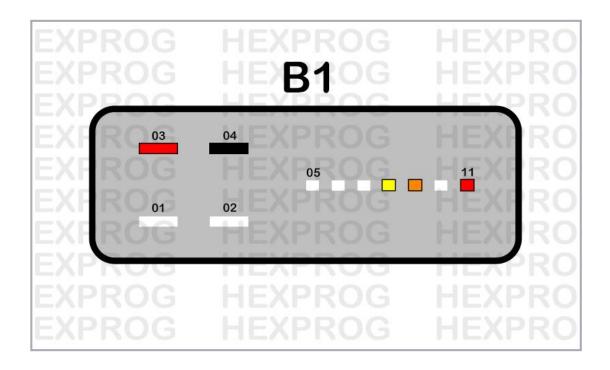

## **Pins Description**

- Block1-Pin 11: Power Supply 12-14V
- Block1-Pin 3: Power Supply 12-14V
- Block1-Pin 4: Ground
- Block1-Pin 8: CANBUS High 2
- Block1-Pin 9: CANBUS Low 2