

Seat DQ200 MQB Wiring

Connection using Factory Mode


Attention

You cannot use OBD Flash files to write into the ECU



Seat-DQ200 MQB-Module

You don't need to open DQ200 MQB cover in this factory mode. Please connect wires as described below

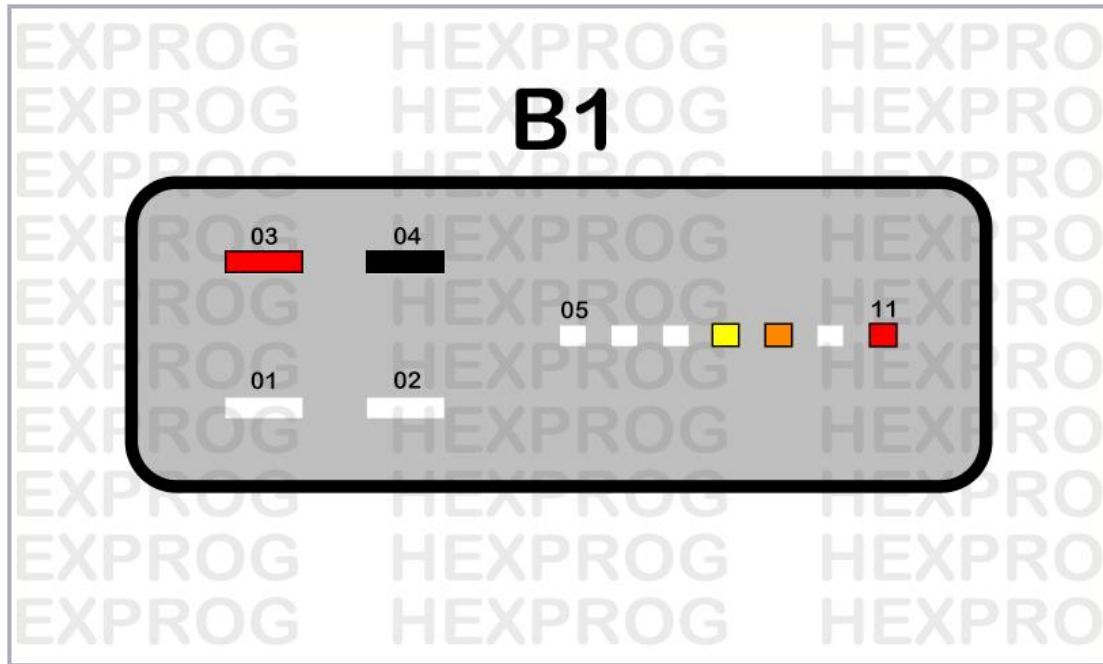

ins Description

- Block1-**Pin 11**: Power Supply 12-14V
- Block1-**Pin 3**: Power Supply 12-14V
- Block1-**Pin 4**: Ground
- Block1-**Pin 8**: CANBUS High 2
- Block1-**Pin 9**: CANBUS Low 2