

Seat DQ250Exx/Fxx Wiring

Connection using Factory Mode


Attention

You cannot use OBD Flash files to write into the ECU



Seat-DQ250Exx-Fxx-Module

You don't need to open DQ250Exx/Fxx cover in this factory mode. Please connect wires as described below

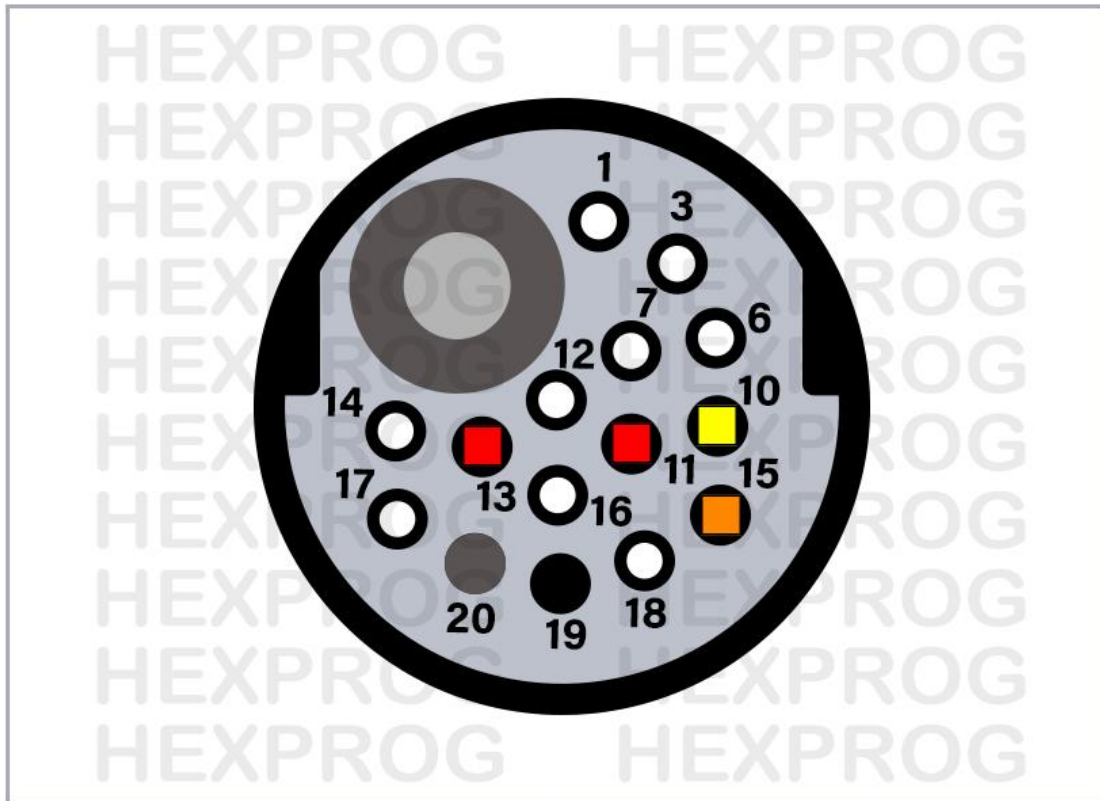

Pins Description

- Block1-Pin 10: CANBUS High 2
- Block1-Pin 11: Power Supply 12-14V
- Block1-Pin 13: Power Supply 12-14V
- Block1-Pin 15: CANBUS Low 2
- Block1-Pin 19: Ground