


EIZ W211-ST12

1. Unplug EIZ from the car (Careless Removal of unit can cause damage to car or control itself, it must be carried under users RISK)
2. Remove EIZ board from the casing



EIZ W211-ST12

3. Solder wires to EIZ based on the below connection diagram using BDM cable

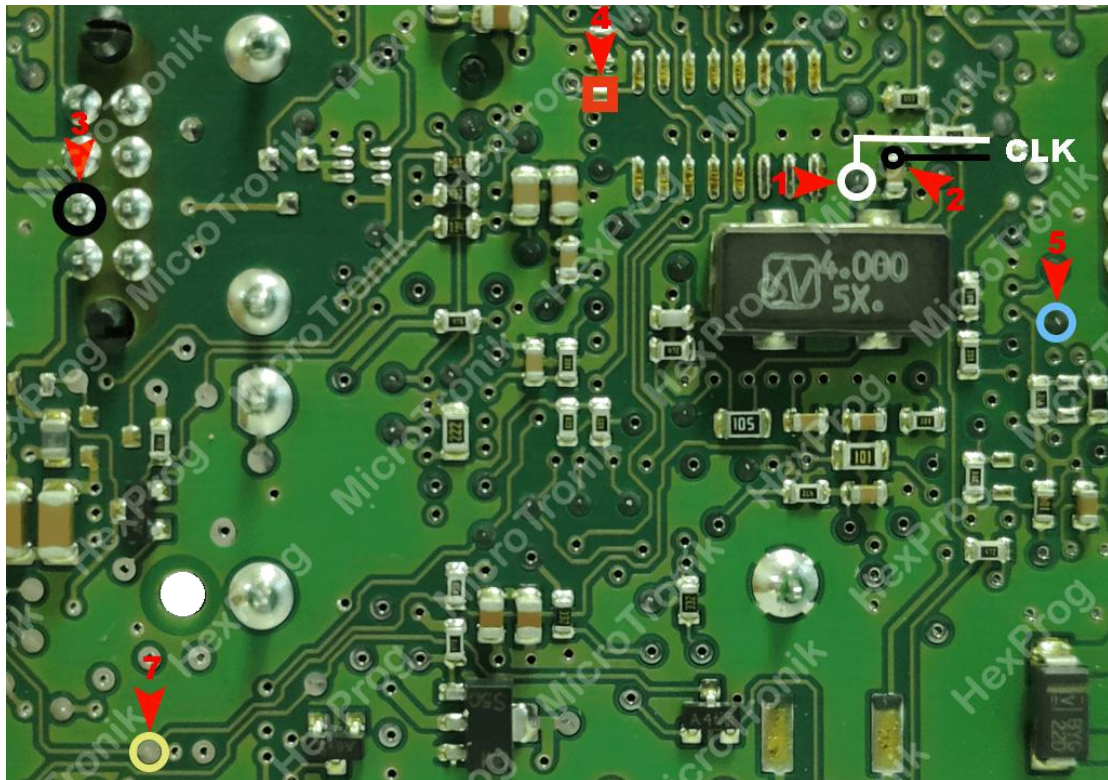

EIZ W211-ST12 Wiring

4. Select the EIZ /CPU version from HexProg software
5. Do the desired function for read/write EIZ in software
6. Unsolder wires
7. Connect EIZ back to car

