

Opel E83 Wiring

Connection using Boot Mode


Attention

You cannot use OBD Flash files to write into the ECU



Opel-E83-Module

You need to open E83 cover in boot mode. Please connect wires as described below

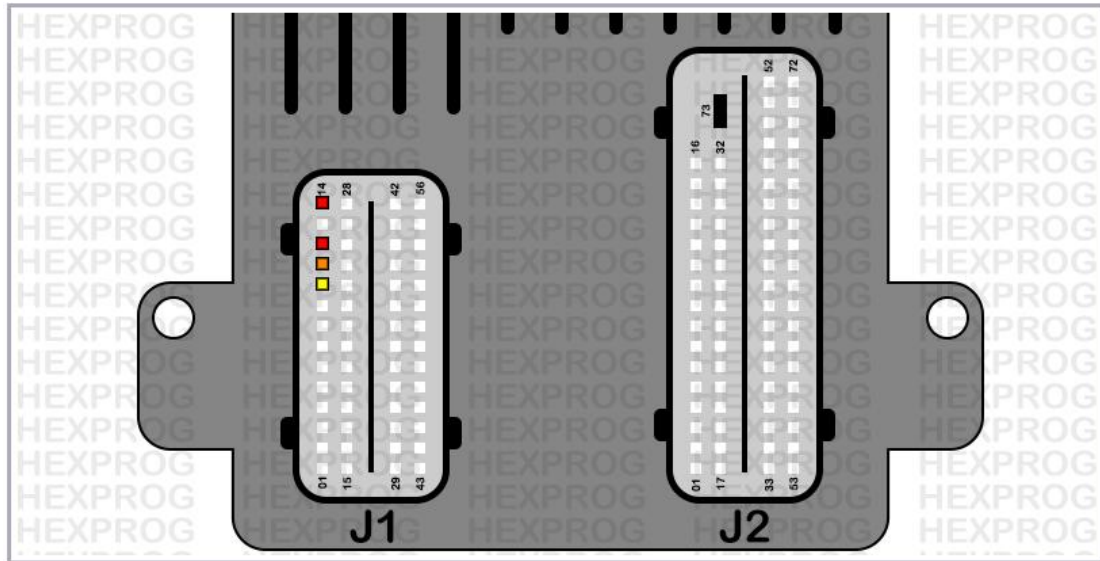

Pins Description


- Block J1-**Pin 10**: CANBUS High 2
- Block J1-**Pin 11**: CANBUS Low 2
- Block J1-**Pin 12**: Power Supply 12-14V
- Block J1-**Pin 14**: Power Supply 12-14V
- Block J2-**Pin 73**: Ground

Internal Wiring

Connect HexProg signals wires to E83 board as shown below



Opel-E83-Inside

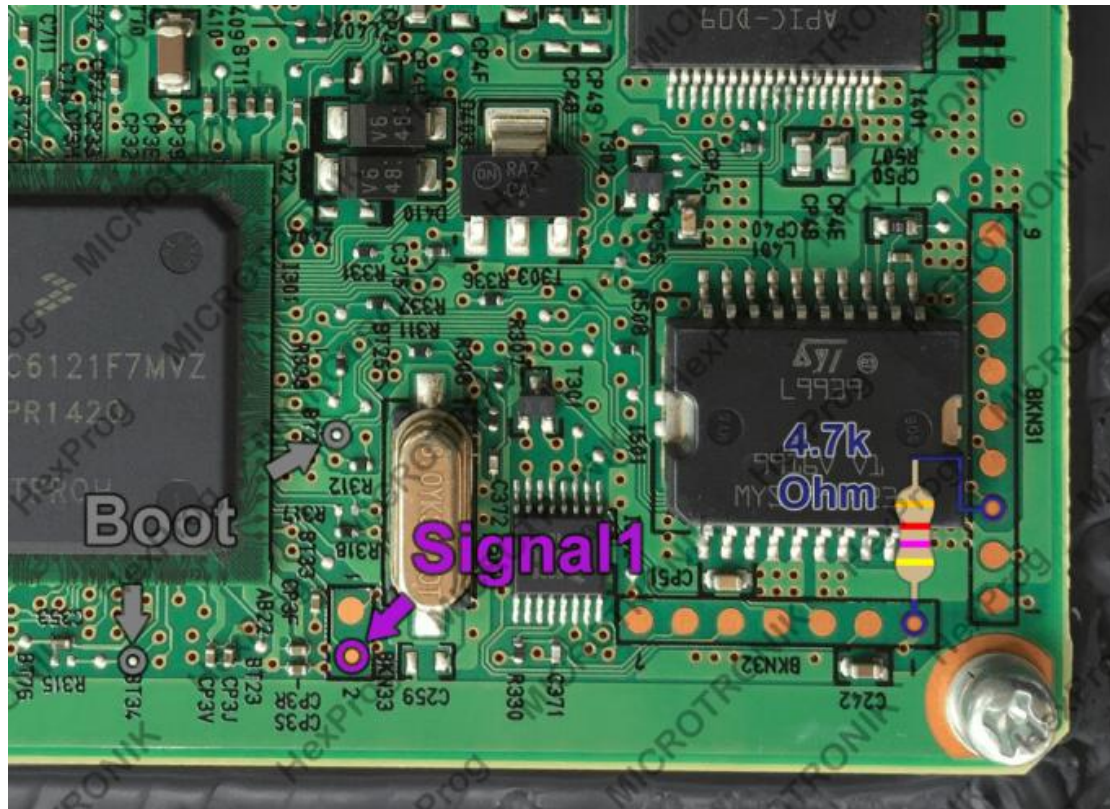

Opel-E83-Boot-Location