


## Opel E98 Wiring

### Connection using Factory Mode


## Attention

**You cannot use OBD Flash files to write into the ECU**

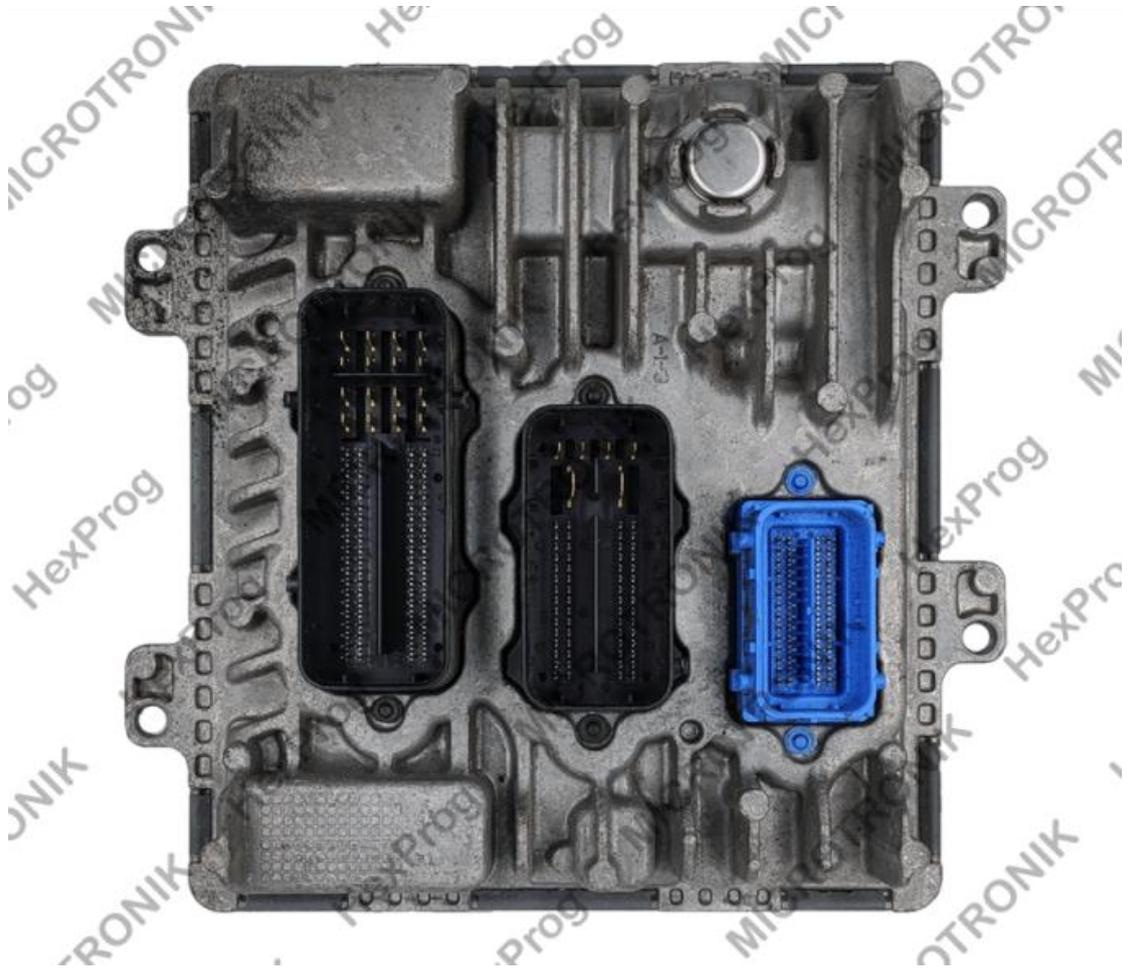

Opel-E98-Module

You don't need to open E98 cover in this factory mode. Please connect wires as described below

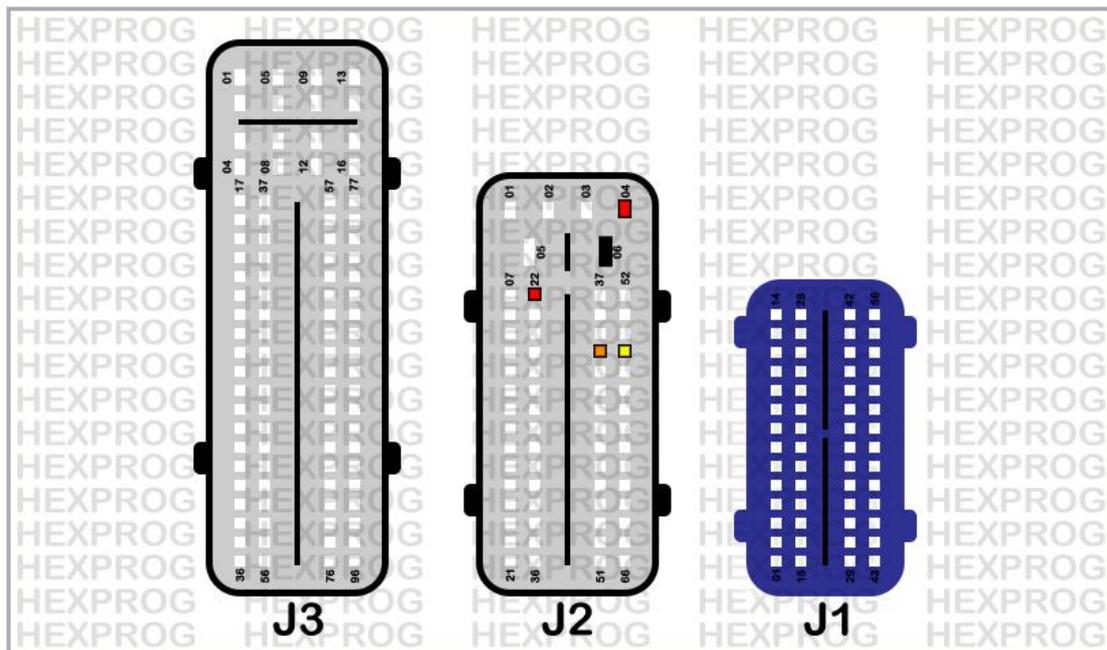

### Pins Description

- Block J2-Pin 04: Power Supply 12-14V
- Block J2-Pin 06: Ground
- Block J2-Pin 22: Power Supply 12-14V
- Block J2-Pin 40: CANBUS Low 2
- Block J2-Pin 55: CANBUS High 2