

## Chevrolet E86 Wiring

### Connection using Factory Mode

## Attention


**You cannot use OBD Flash files to write into the ECU**



Chevrolet-E86-Module

You don't need to open E86 cover in this factory mode. Please connect wires as described below


### Option 1

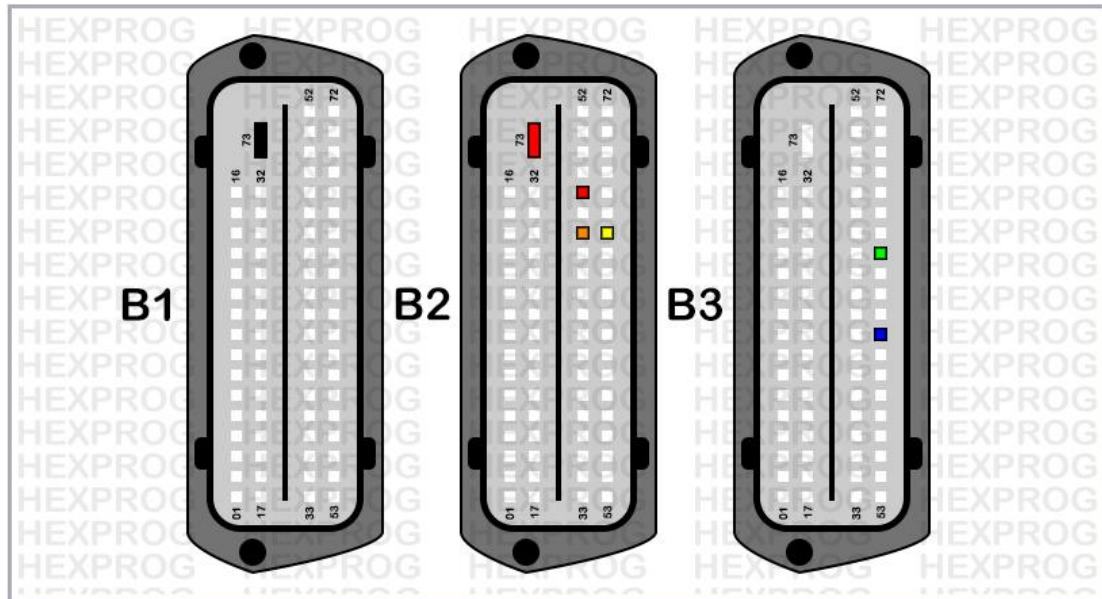

### Pins Description for Option 1

- Block 1-**Pin 73**: Ground
- Block 2-**Pin 46**: CANBUS Low 2
- Block 2-**Pin 48**: Power Supply 12-14V
- Block 2-**Pin 66**: CANBUS High 2
- Block 2-**Pin 73**: Power Supply 12-14V
- Block 3-**Pin 61**: Clock 1 Signal
- Block 3-**Pin 65**: Clock 2 Signal

### Option 2

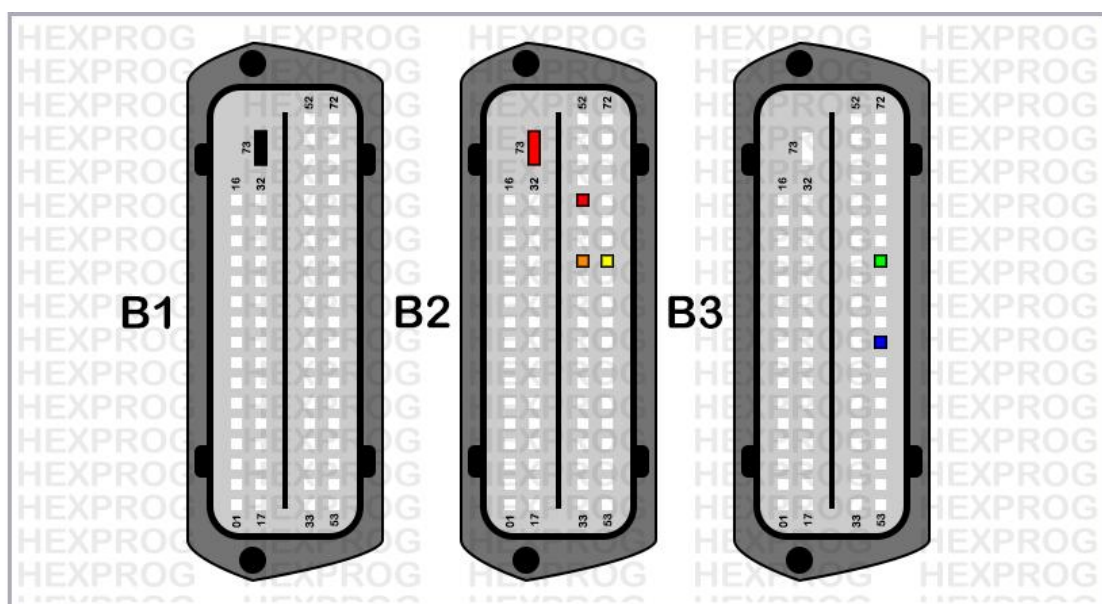

### *Pins Description for Option 2*

- Block 1-**Pin: 73** Ground
- Block 2-**Pin: 45** CANBUS Low 2
- Block 2-**Pin: 48** Power Supply 12-14V
- Block 2-**Pin: 65** CANBUS High 2
- Block 2-**Pin: 73** Power Supply 12-14V
- Block 3-**Pin: 61** Clock 1 Signal
- Block 3-**Pin: 65** Clock 2 Signal