

## Chevrolet E92 Wiring

### Connection using Factory Mode


## Attention

**You cannot use OBD Flash files to write into the ECU**



Chevrolet-E92-Module

You don't need to open E92 cover in this factory mode. Please connect wires as described below

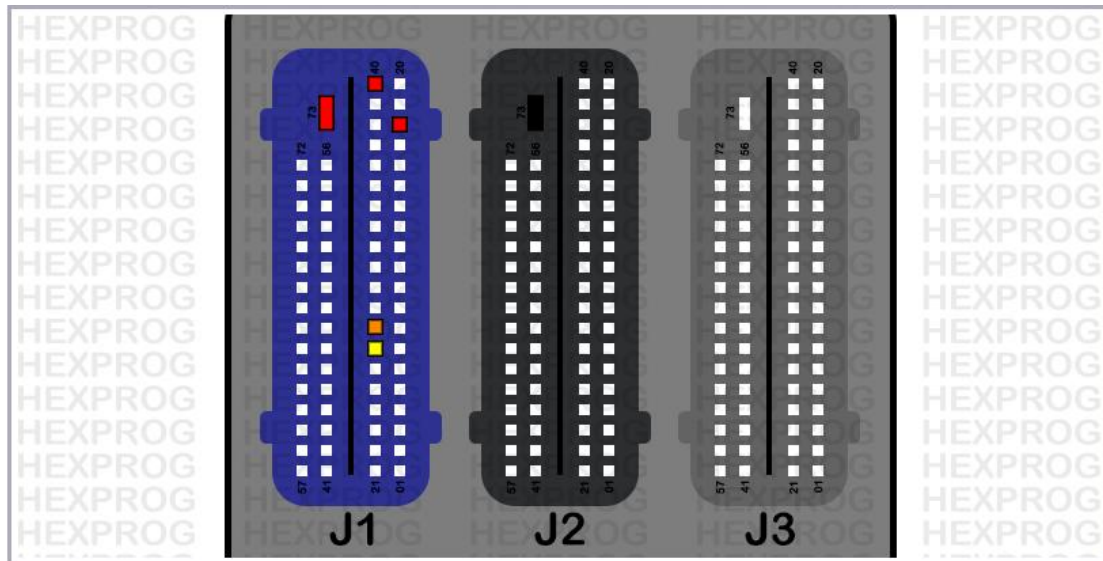

### Pins Description

- Block J1-**Pin 18**: Power Supply 12-14V
- Block J1-**Pin 27**: CANBUS High 2
- Block J1-**Pin 28**: CANBUS Low 2
- Block J1-**Pin 40**: Power Supply 12-14V
- Block J1-**Pin 73**: Power Supply 12-14V
- Block J2-**Pin 73**: Ground