


Chevrolet E98 Wiring

Connection using Factory Mode


Attention

You cannot use OBD Flash files to write into the ECU

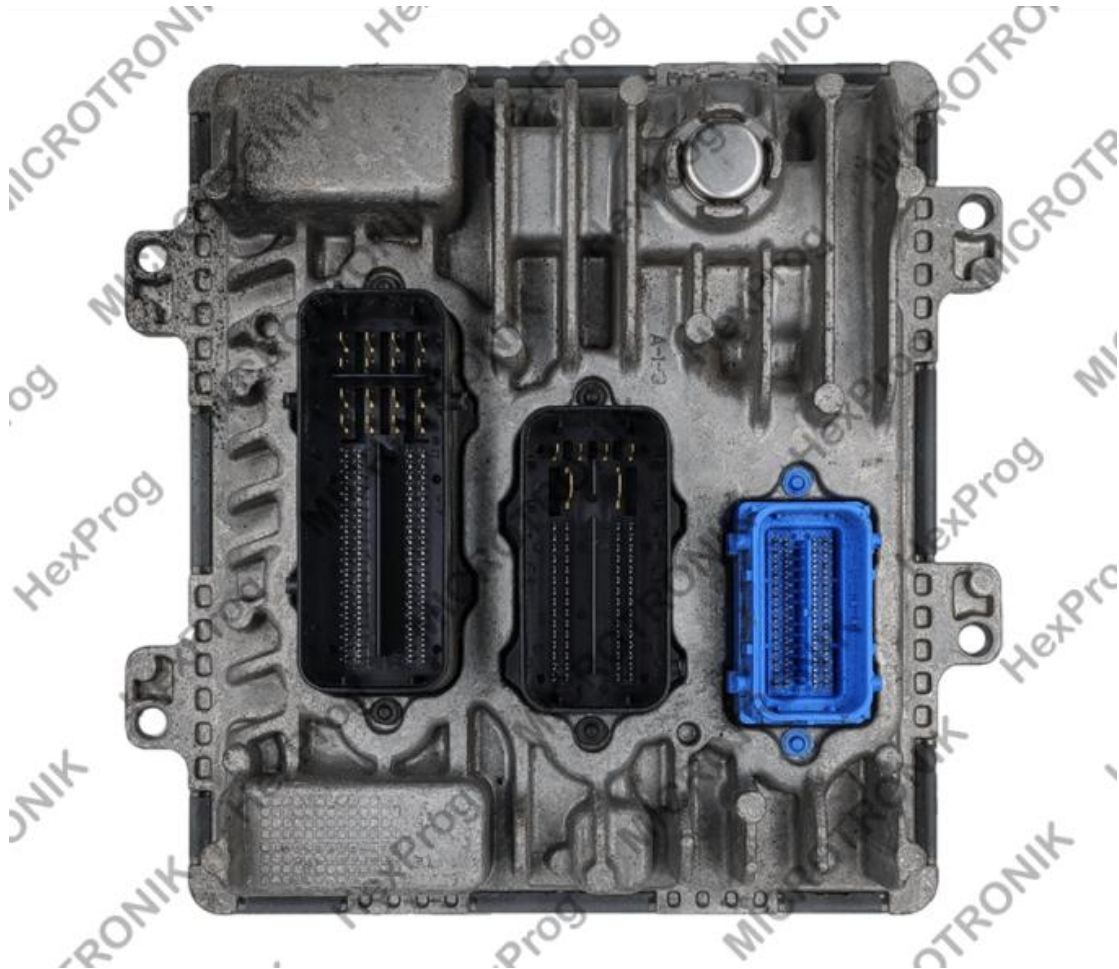

Chevrolet-E98-Module

You don't need to open E98 cover in this factory mode. Please connect wires as described below

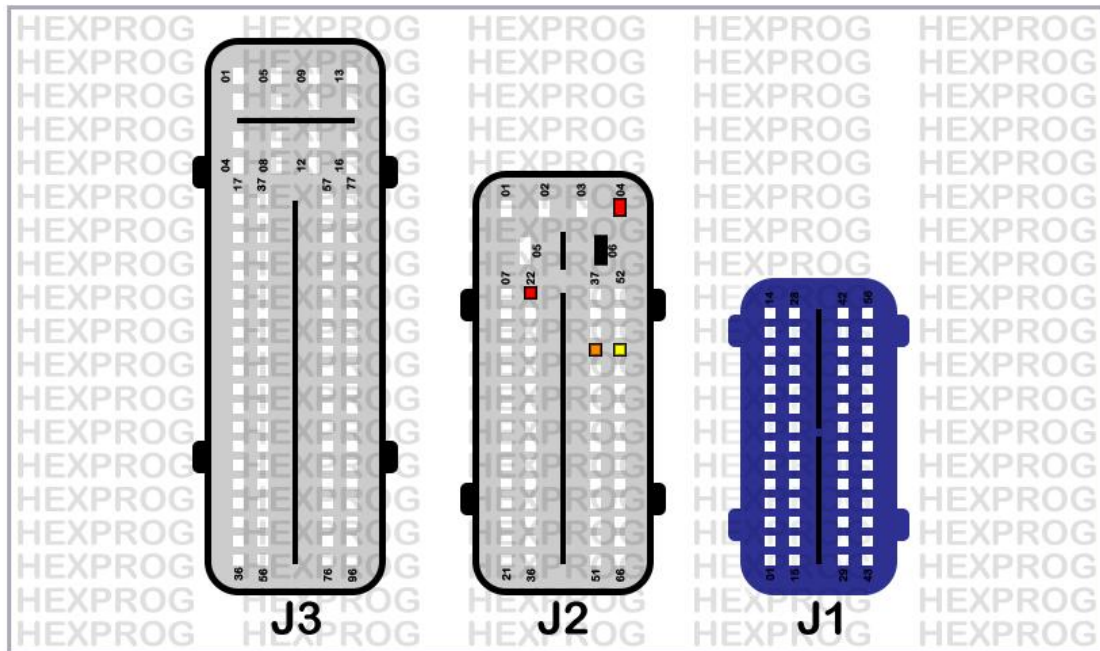

Pins Description

- Block J2-**Pin 04**: Power Supply 12-14V
- Block J2-**Pin 06**: Ground
- Block J2-**Pin 22**: Power Supply 12-14V
- Block J2-**Pin 40**: CANBUS Low 2
- Block J2-**Pin 55**: CANBUS High 2