

Chevrolet E39A Wiring

Connection using Boot Mode


Attention

You cannot use OBD Flash files to write into the ECU



Chevrolet-E39A-Module

You need to open E39A cover in boot mode. Please connect wires as described below

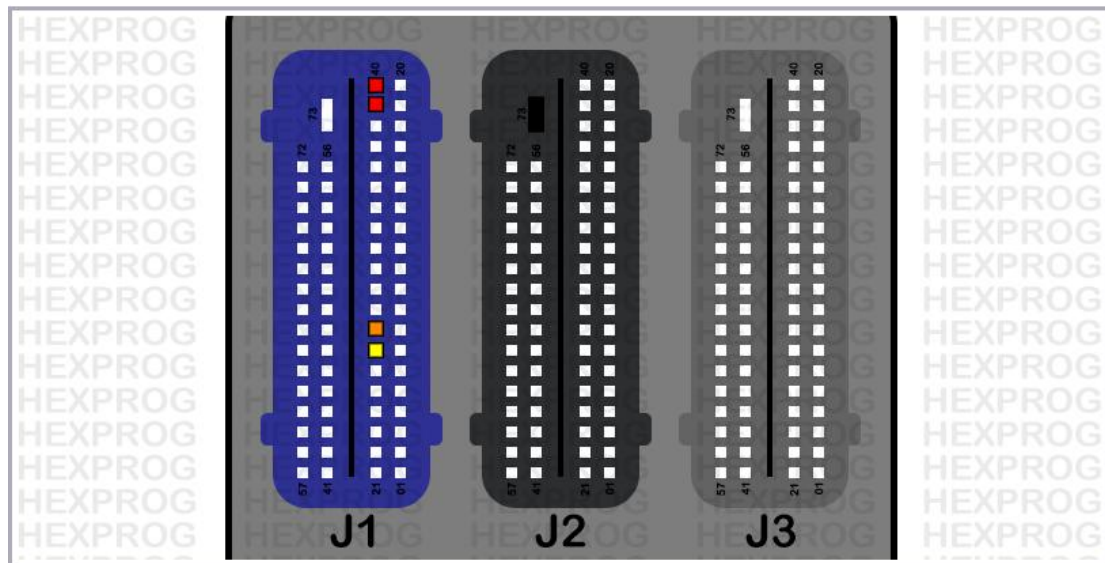

Pins Description


- Block J1-**Pin 27**: CANBUS High 2
- Block J1-**Pin 28**: CANBUS Low 2
- Block J1-**Pin 39**: Power Supply 12-14V
- Block J1-**Pin 40**: Power Supply 12-14V
- Block J2-**Pin 73**: Ground

Internal Wiring

Connect HexProg signals wires to E39A board as shown below



Chevrolet-E39A-Inside

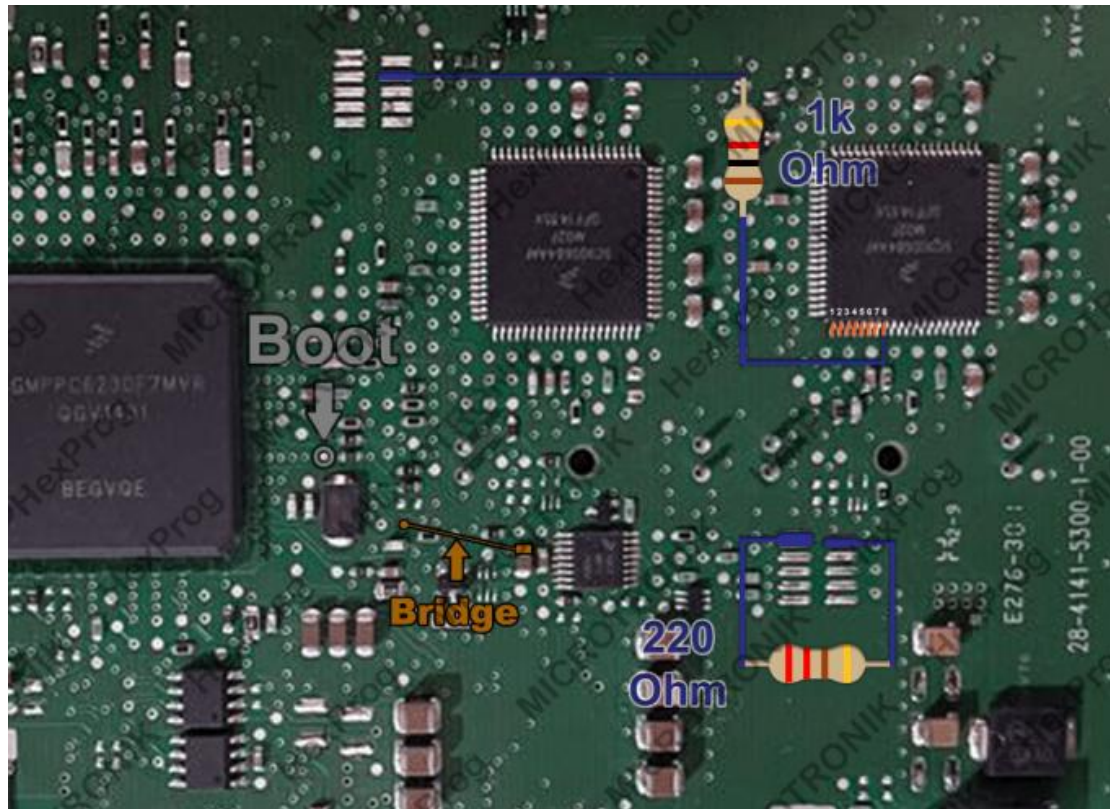

Chevrolet-E39A-Boot-Location