

## Chevrolet E80 Wiring

### Connection using Boot Mode


## Attention

**You cannot use OBD Flash files to write into the ECU**



Chevrolet-E80-Module

You need to open E80 cover in boot mode. Please connect wires as described below

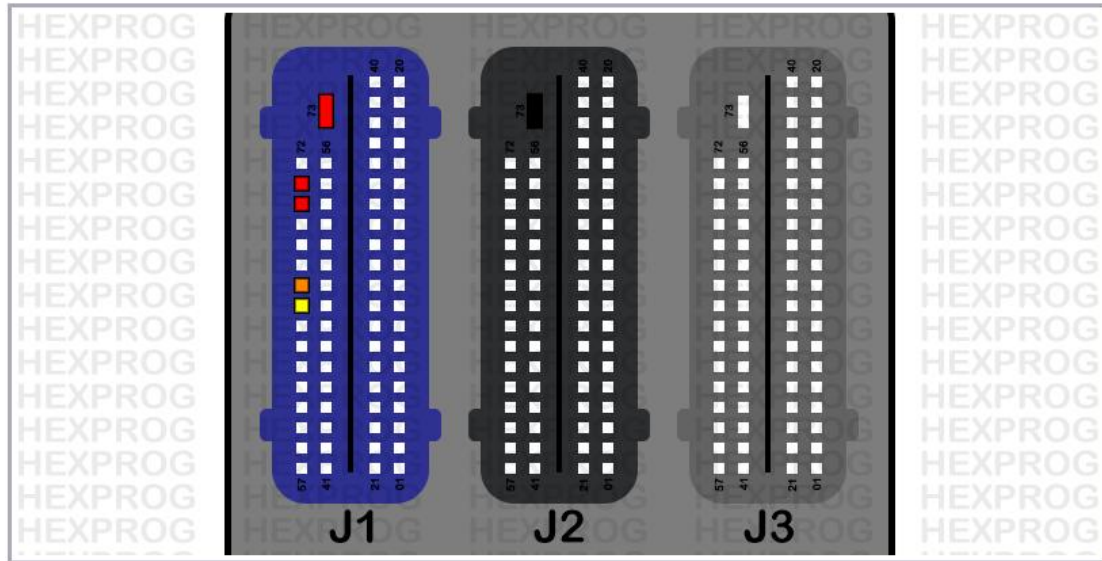

### Pins Description


- Block J1-**Pin 65**: CANBUS High 2
- Block J1-**Pin 66**: CANBUS Low 2
- Block J1-**Pin 70**: Power Supply 12-14V
- Block J1-**Pin 71**: Power Supply 12-14V
- Block J1-**Pin 73**: Power Supply 12-14V
- Block J2-**Pin 73**: Ground

### Internal Wiring

Connect HexProg signals wires to E80 board as shown below



Chevrolet-E80-Inside

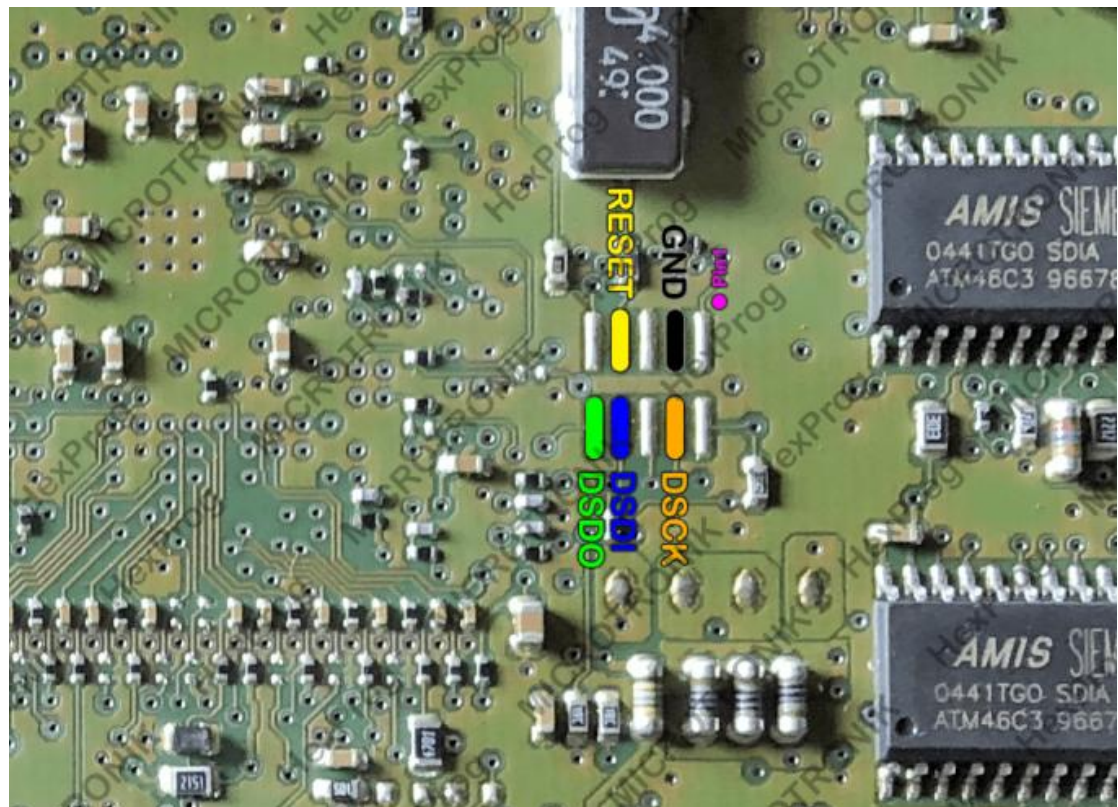

## Chevrolet-E80-Boot-Location