

## Chevrolet E87 Wiring

### Connection using Boot Mode


## Attention

**You cannot use OBD Flash files to write into the ECU**



Chevrolet-E87-Module

You need to open E87 cover in boot mode. Please connect wires as described below

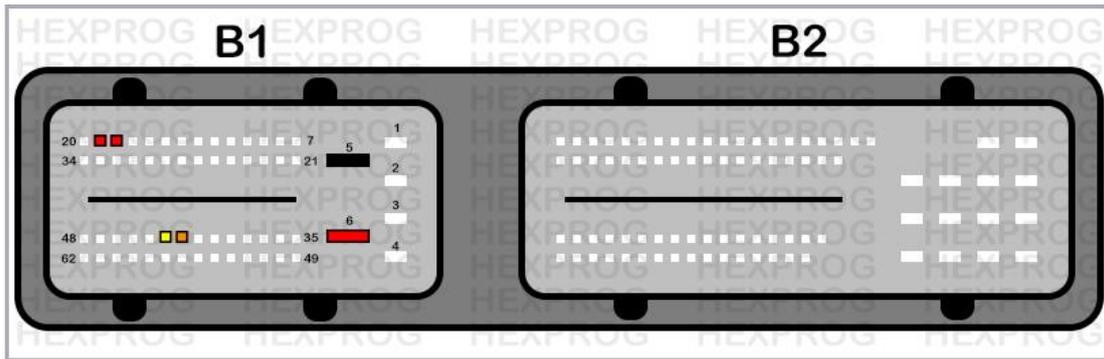

## Pins Description

- Block 1-**Pin 18**: Power Supply 12-14V
- Block 1-**Pin 19**: Power Supply 12-14V
- Block 1-**Pin 42**: CANBUS Low 2
- Block 1-**Pin 43**: CANBUS High 2
- Block 1-**Pin 5**: Ground
- Block 1-**Pin 6**: Power Supply 12-14V

## Internal Wiring

Connect HexProg signals wires to E87 board as shown below



Chevrolet-E87-Inside



Chevrolet-E87-Boot-Location