

## Buick E39A Wiring

### Connection using Boot Mode


## Attention

**You cannot use OBD Flash files to write into the ECU**



Buick-E39A-Module

You need to open E39A cover in boot mode. Please connect wires as described below

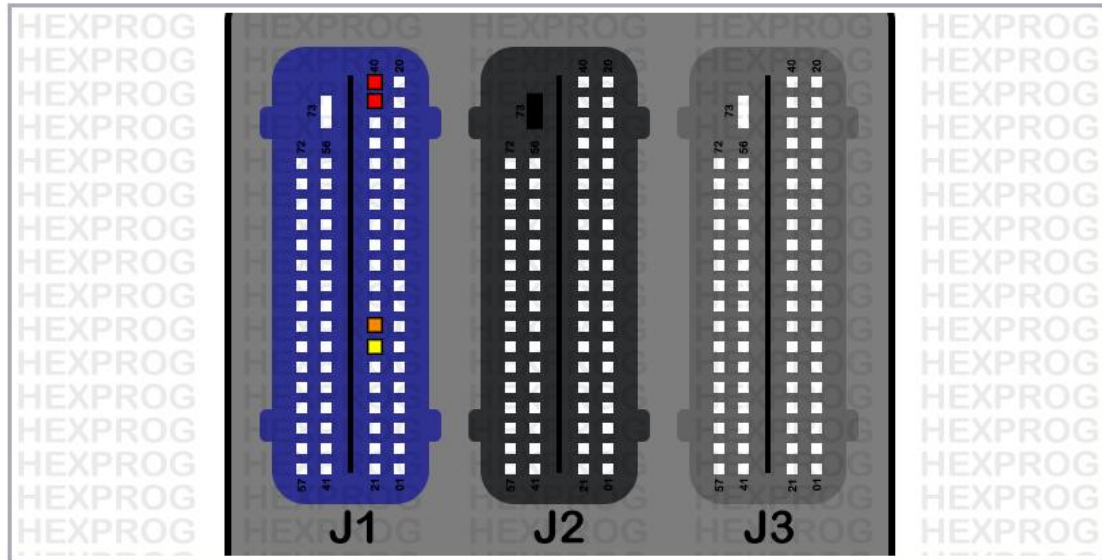

### Pins Description


- Block J1-**Pin 27**: CANBUS High 2
- Block J1-**Pin 28**: CANBUS Low 2
- Block J1-**Pin 39**: Power Supply 12-14V
- Block J1-**Pin 40**: Power Supply 12-14V
- Block J2-**Pin 73**: Ground

### Internal Wiring

Connect HexProg signals wires to E39A board as shown below



Buick-E39A-Inside

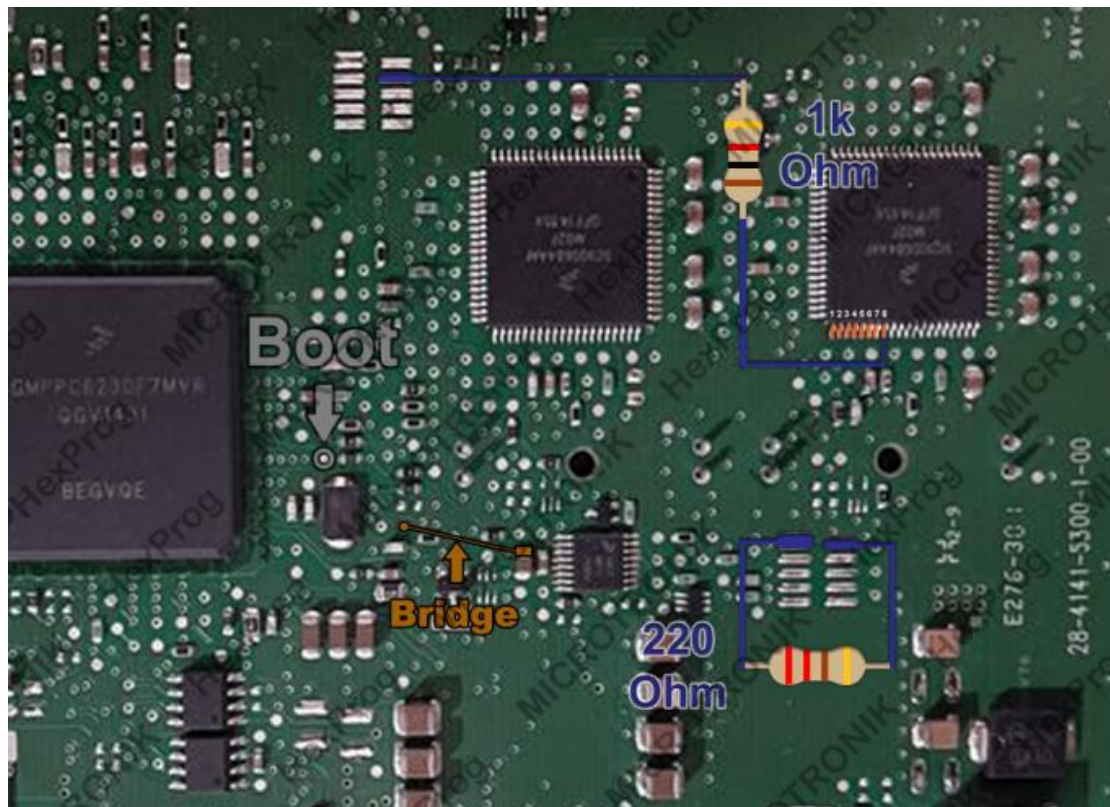

Buick-E39A-Boot-Location