

GMC E86 Wiring

Connection using Factory Mode

Attention


You cannot use OBD Flash files to write into the ECU



GMC-E86-Module

You don't need to open E86 cover in this factory mode. Please connect wires as described below


Option 1

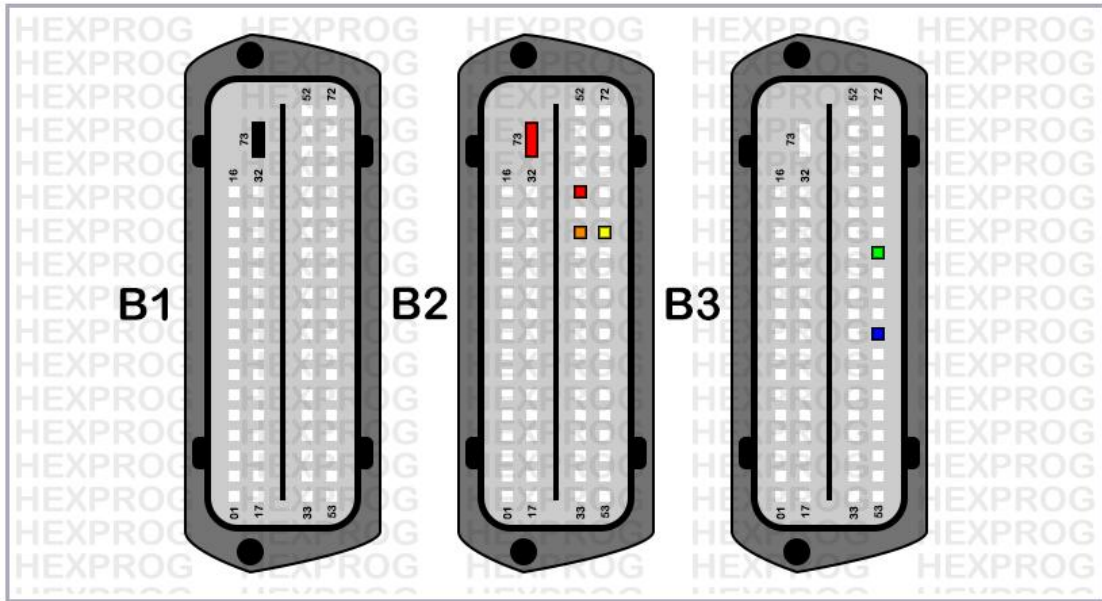

Pins Description for Option 1

- Block 1-Pin 73: Ground
- Block 2-Pin 46: CANBUS Low 2
- Block 2-Pin 48: Power Supply 12-14V
- Block 2-Pin 66: CANBUS High 2
- Block 2-Pin 73: Power Supply 12-14V
- Block 3-Pin 61: Clock 1 Signal
- Block 3-Pin 65: Clock 2 Signal

Option 2

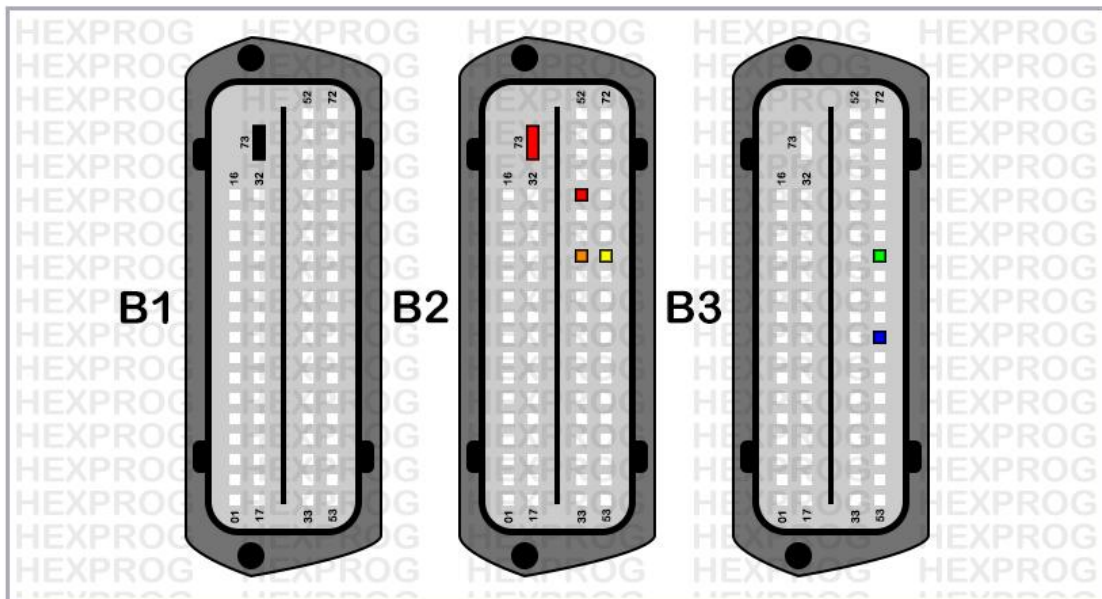

Pins Description for Option 2

- Block 1-**Pin: 73** Ground
- Block 2-**Pin: 45** CANBUS Low 2
- Block 2-**Pin: 48** Power Supply 12-14V
- Block 2-**Pin: 65** CANBUS High 2
- Block 2-**Pin: 73** Power Supply 12-14V
- Block 3-**Pin: 61** Clock 1 Signal
- Block 3-**Pin: 65** Clock 2 Signal