

## Audi MED9.1.2 Wiring

### Connection using Factory Mode

## Attention

**You cannot use OBD Flash files to write into the ECU**




## Audi-MED9.1.2-Module

You don't need to open MED9.1.2 cover in this factory mode. Please connect wires as described below

### Available Online Services in MED9.1.2 for Hexprog/Hextag users:

- Delete Fault Code(s)
- Exhaust Gas Recirculation OFF
- Lambda Sensor OFF
- Evaporative Emission OFF
- secondary air injection system OFF
- NOx OFF

Check your online services from here to apply to one of these services: [My Online Services](#)

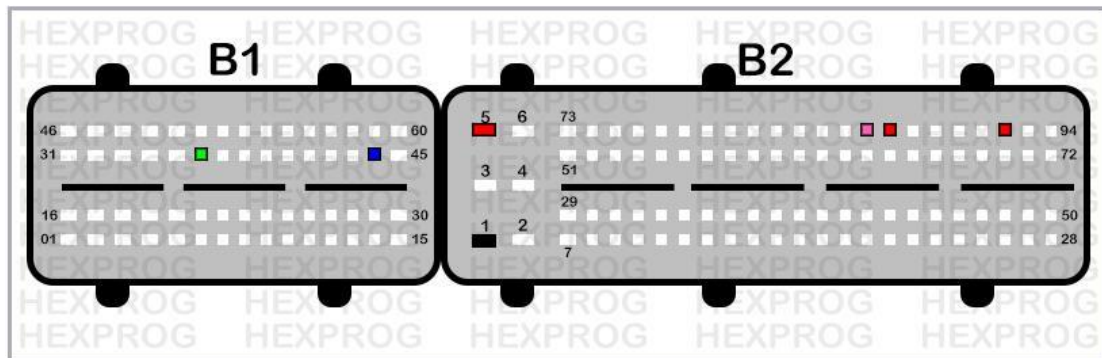

### Pins Description

- Block1-Pin 36: Clock 2 Signal
- Block1-Pin 44: Clock 1 Signal
- Block2-Pin 1: Ground
- Block2-Pin 5: Power Supply 12-14V
- Block2-Pin 86: K-Line Signal

- Block2-**Pin 87**: Power Supply 12-14V
- Block2-**Pin 92**: Power Supply 12-14V