

Porsche ME7.8.2 Wiring

Connection using Boot Mode


Attention

You cannot use OBD Flash files to write into the ECU



Porsche-ME7.8.2-Module

You need to open ME7.8.2 cover in boot mode. Please connect wires as described below

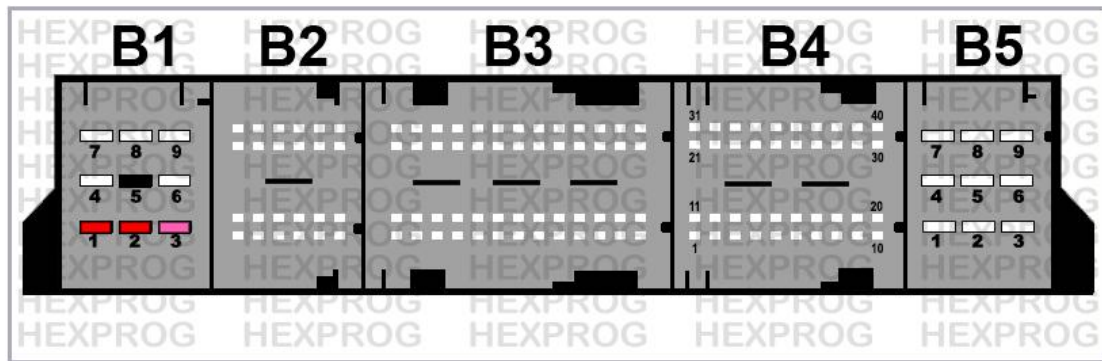

Pins Description

- Block1-Pin 1: Power Supply 12-14V
- Block1-Pin 2: Power Supply 12-14V
- Block1-Pin 3: K-Line Signal
- Block1-Pin 5: Ground

Internal Wiring

Connect HexProg signals wires to ME7.8.2 board as shown below



Porsche-ME7.8.2-Inside



Porsche-ME7.8.2-Boot-Location