


Ford MED17 Wiring

Connection using Factory Mode

Attention

You cannot use OBD Flash files to write into the ECU

You don't need to open MED17 cover in this factory mode. Please connect wires as described below

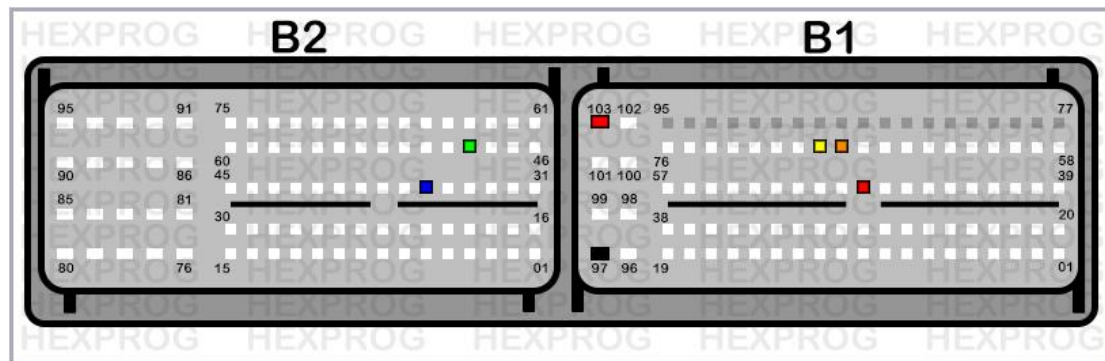

Pins Description

- Block 1-**Pin 103**: Power Supply 12-14V
- Block 1-**Pin 48**: Power Supply 12-14V
- Block 1-**Pin 68**: CANBUS Low 2
- Block 1-**Pin 69**: CANBUS High 2
- Block 1-**Pin 97**: Ground
- Block 2-**Pin 36**: Clock 1 Signal
- Block 2-**Pin 49**: Clock 2 Signal