

Ford MEDG17.0 Wiring

Connection using Boot Mode


Attention

You cannot use OBD Flash files to write into the ECU



Ford-MEDG17.0-Module

You need to open MEDG17.0 cover in boot mode. Please connect wires as described below

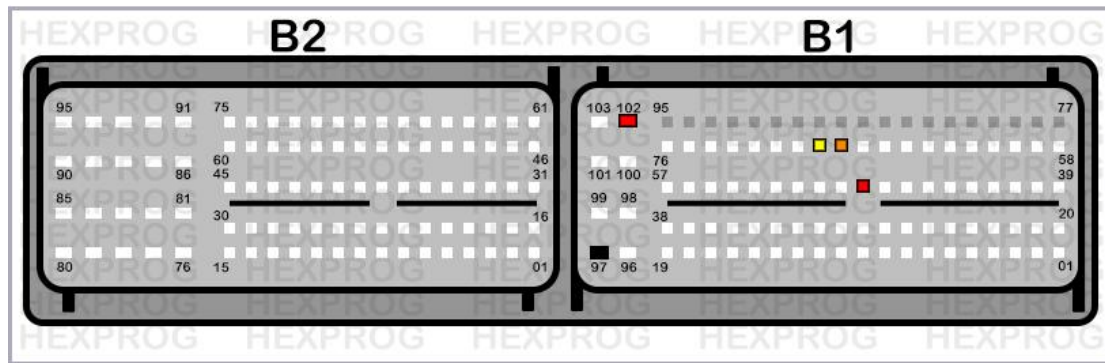

Pins Description

- Block 1-**Pin 102**: Power Supply 12-14V
- Block 1-**Pin 48**: Power Supply 12-14V
- Block 1-**Pin 68**: CANBUS Low 2
- Block 1-**Pin 69**: CANBUS High 2
- Block 1-**Pin 97**: Ground

Internal Wiring

Connect HexProg signals wires to MEDG17.0 board as shown below



Ford-MEDG17.0-Inside



Ford-MEDG17.0-Inside