


# Toyota EDC16C10 Wiring

## Connection using Factory Mode

### Attention

## You cannot use OBD Flash files to write into the ECU

You don't need to open EDC16C10 cover in this factory mode. Please connect wires as described below

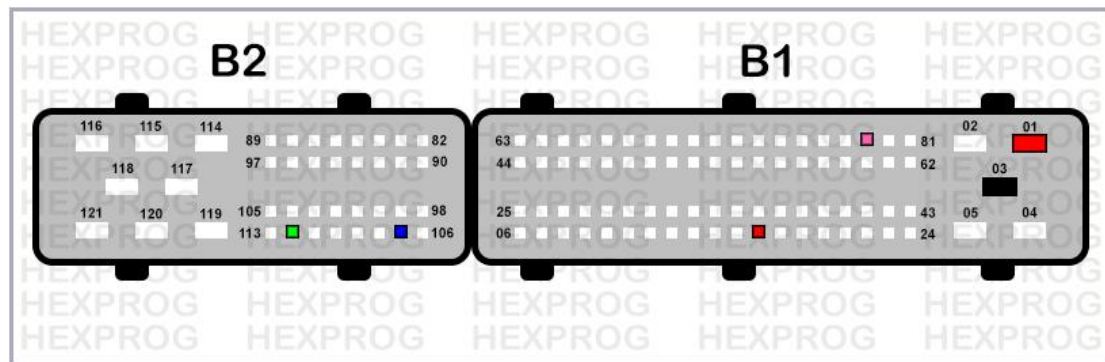

### *Pins Description*

- Block 1-**Pin 1**: Power Supply 12-14V
- Block 1-**Pin 17**: Power Supply 12-14V
- Block 1-**Pin 3**: Ground
- Block 1-**Pin 79**: K-Line Signal
- Block 2-**Pin 107**: Clock 1 Signal
- Block 2-**Pin 112**: Clock 2 Signal