


# Ford MD1CP006 Wiring

## Connection using Factory Mode

### Attention

**You cannot use OBD Flash files to write into the ECU**

You don't need to open MD1CP006 cover in this factory mode. Please connect wires as described below

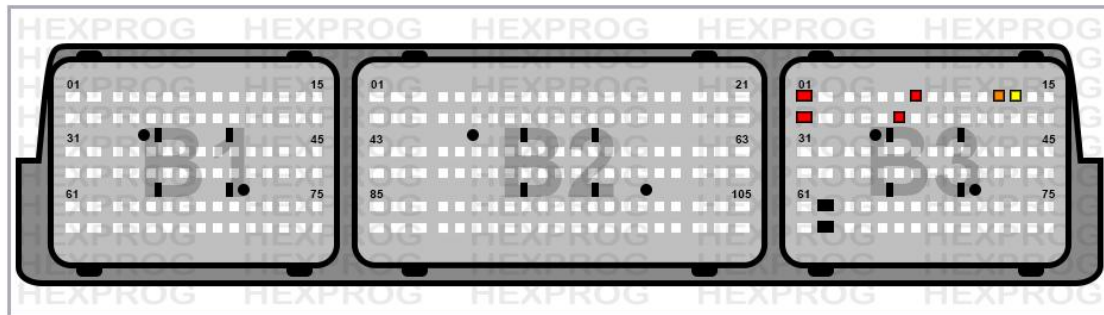

### Pins Description

- Block3-Pin 1: Power Supply 12-14V
- Block3-Pin 12: CANBUS Low 2
- Block3-Pin 13: CANBUS High 2
- Block3-Pin 16: Power Supply 12-14V
- Block3-Pin 21: Power Supply 12-14V
- Block3-Pin 62: Ground
- Block3-Pin 7: Power Supply 12-14V
- Block3-Pin 77: Ground