

# Renault ME17.9.20 Wiring


## Connection using Factory Mode

### Attention

**You cannot use OBD Flash files to write into the ECU**

You don't need to open ME17.9.20 cover in this factory mode. Please connect wires as described below


#### Option 1

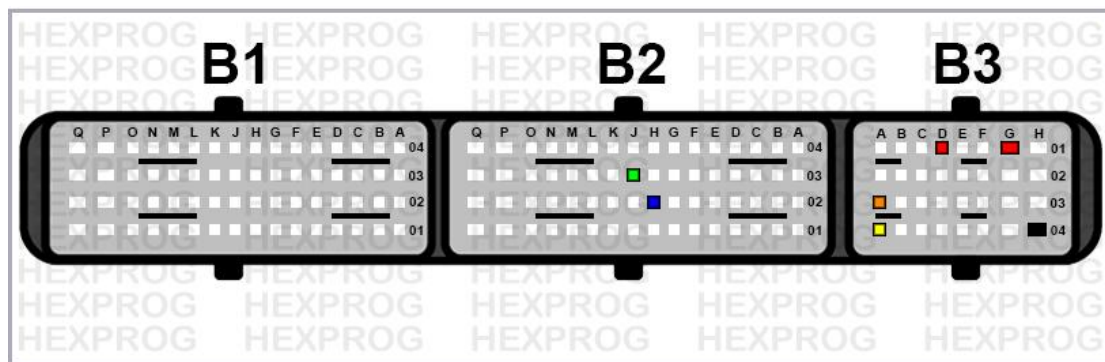

#### Pins Description for Option 1

- Block 2-**Pin H2**: Clock 1 Signal
- Block 2-**Pin J3**: Clock 2 Signal
- Block 3-**Pin A3**: CANBUS Low 2
- Block 3-**Pin A4**: CANBUS High 2
- Block 3-**Pin D1**: Power Supply 12-14V
- Block 3-**Pin G1**: Power Supply 12-14V
- Block 3-**Pin H4**: Ground

#### Option 2

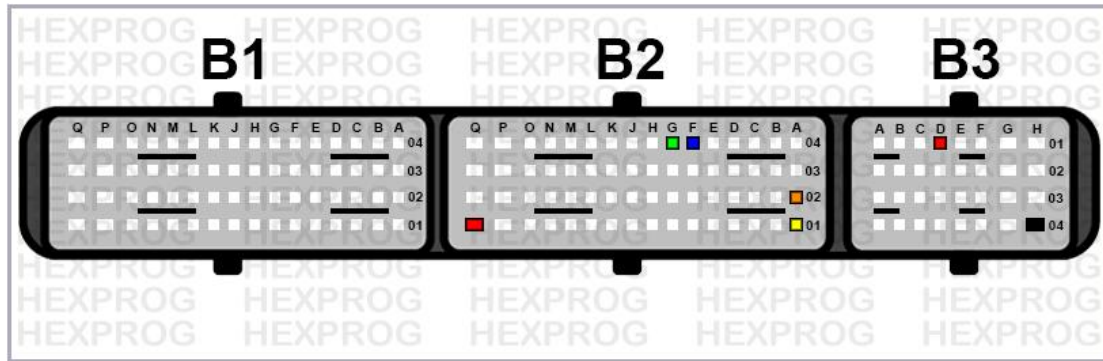

### Pins Description for Option 2

- Block 2-Pin: **A1** CANBUS High 2
- Block 2-Pin: **A2** CANBUS Low 2
- Block 2-Pin: **F4** Clock 1 Signal
- Block 2-Pin: **G4** Clock 2 Signal
- Block 2-Pin: **Q1** Power Supply 12-14V
- Block 3-Pin: **D1** Power Supply 12-14V
- Block 3-Pin: **H4** Ground