


Porsche ME7.1.1 Wiring

Connection using Boot Mode

Attention

You cannot use OBD Flash files to write into the ECU

You need to open ME7.1.1 cover in boot mode. Please connect wires as described below

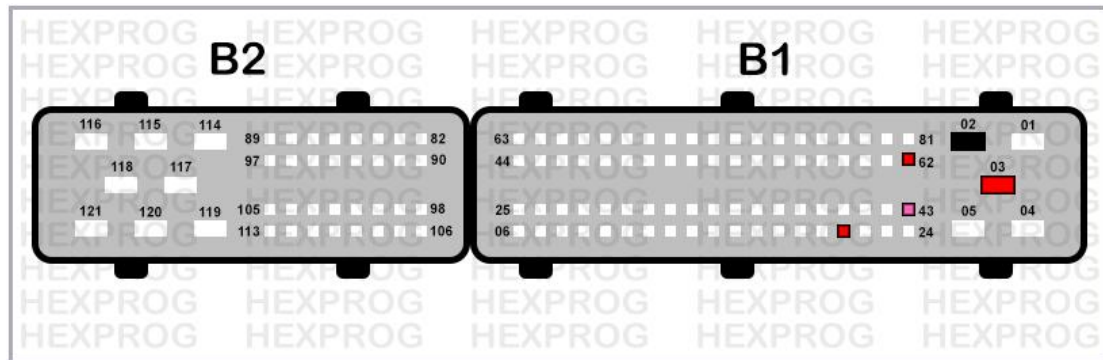

Pins Description


- Block 1-**Pin 2**: Ground
- Block 1-**Pin 21**: Power Supply 12-14V
- Block 1-**Pin 3**: Power Supply 12-14V
- Block 1-**Pin 43**: K-Line Signal
- Block 1-**Pin 62**: Power Supply 12-14V

Internal Wiring

Connect HexProg signals wires to ME7.1.1 board as shown below



Porsche-ME7.1.1-Inside

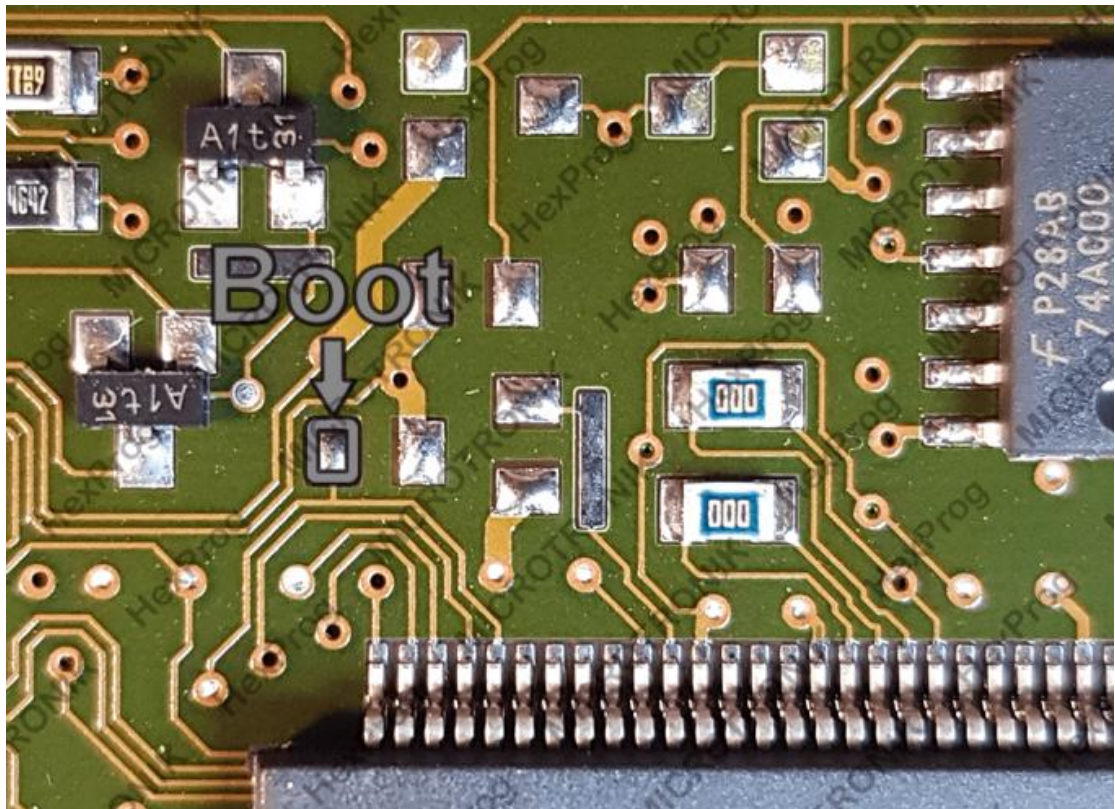

Porsche-ME7.1.1-Boot-Location