

Porsche ME7.2 Wiring

Connection using Boot Mode


Attention

You cannot use OBD Flash files to write into the ECU



Porsche-ME7.2-Module

You need to open ME7.2 cover in boot mode. Please connect wires as described below

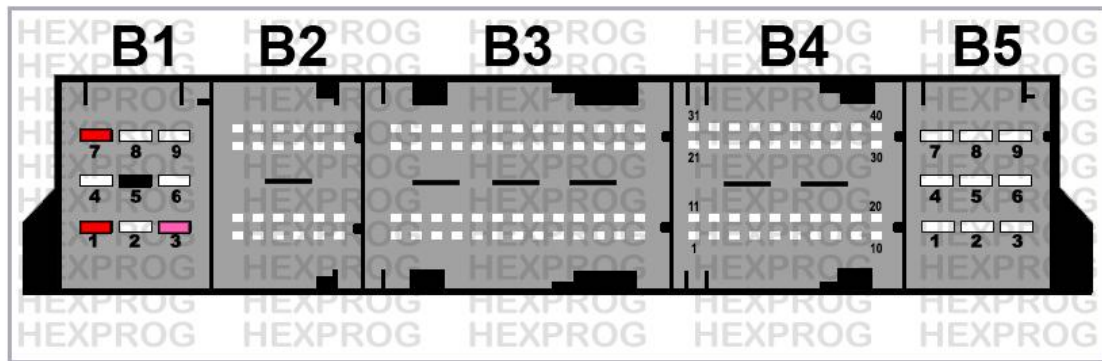

Pins Description


- Block1-Pin 1: Power Supply 12-14V
- Block1-Pin 3: K-Line Signal
- Block1-Pin 5: Ground
- Block1-Pin 7: Power Supply 12-14V

Internal Wiring

Connect HexProg signals wires to ME7.2 board as shown below



Porsche-ME7.2-Inside

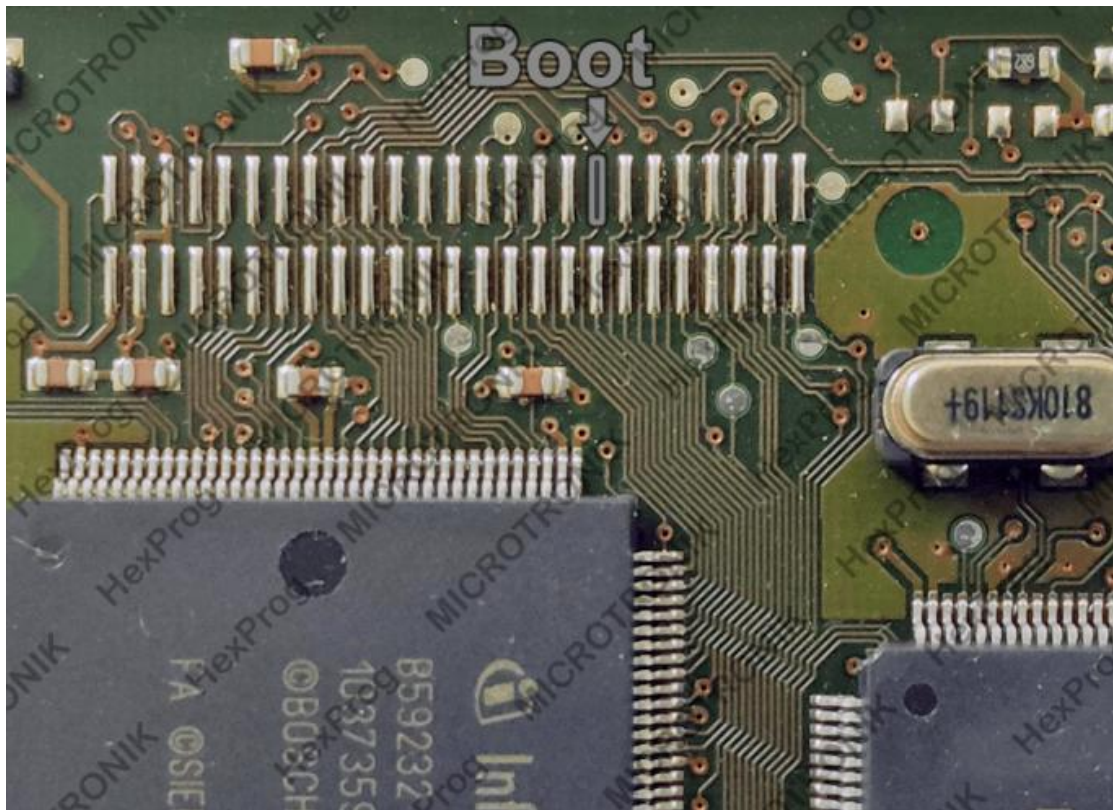

Porsche-ME7.2-Boot-Location