

## Porsche ME7.8.1 Wiring

### Connection using Boot Mode


## Attention

**You cannot use OBD Flash files to write into the ECU**



Porsche-ME7.8.1-Module

You need to open ME7.8.1 cover in boot mode. Please connect wires as described below

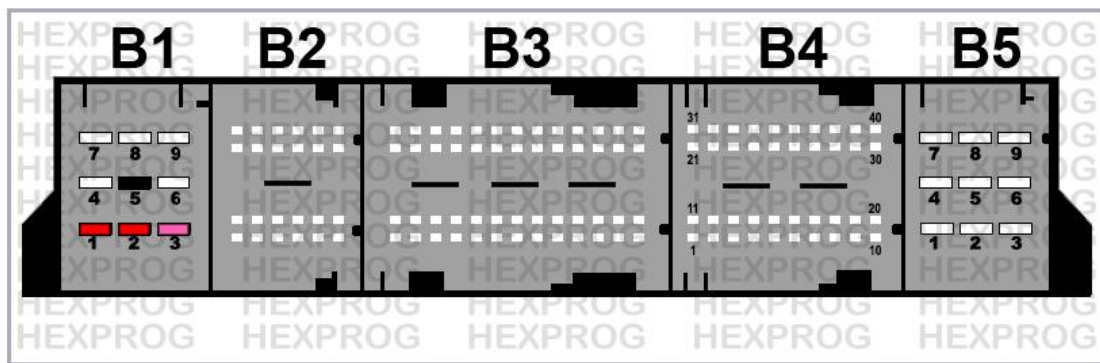

## Pins Description


- Block1-Pin 1: Power Supply 12-14V
- Block1-Pin 2: Power Supply 12-14V
- Block1-Pin 3: K-Line Signal
- Block1-Pin 5: Ground

## Internal Wiring

Connect HexProg signals wires to ME7.8.1 board as shown below



Porsche-ME7.8.1-Inside

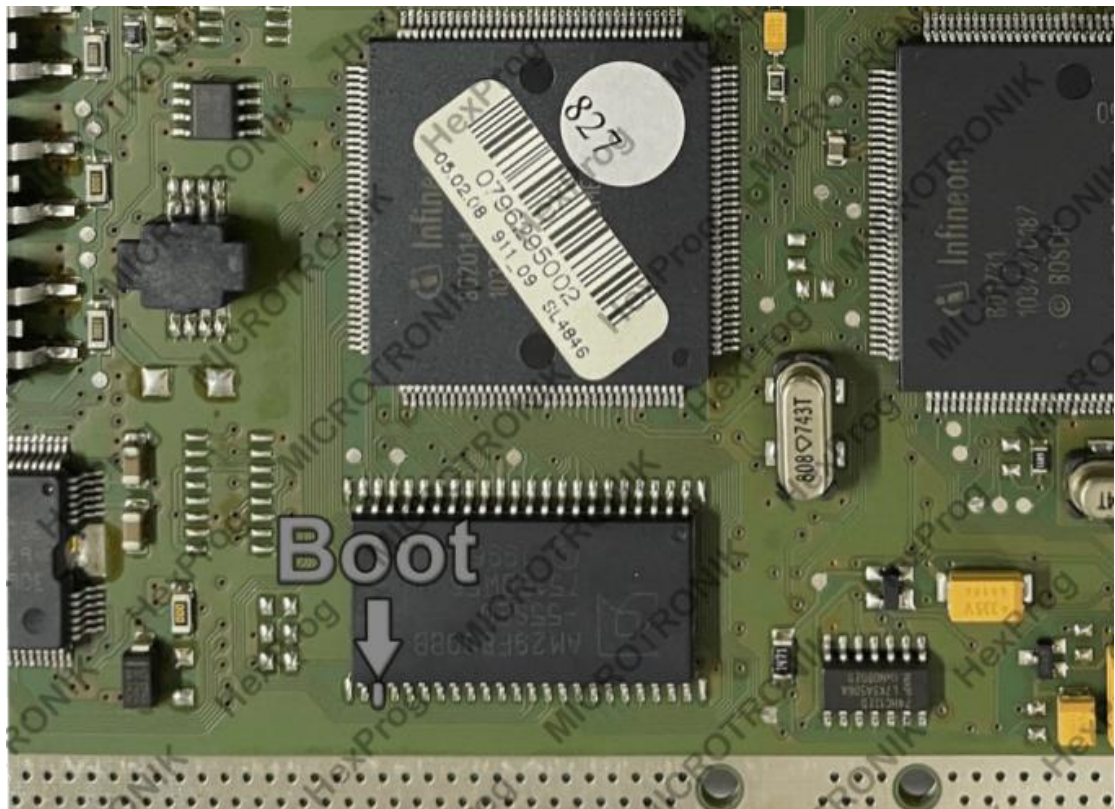

Porsche-ME7.8.1-Boot-Location