


Renault EDC17C11 Wiring

Connection using Factory Mode

Attention

You cannot use OBD Flash files to write into the ECU

You don't need to open EDC17C11 cover in this factory mode. Please connect wires as described below

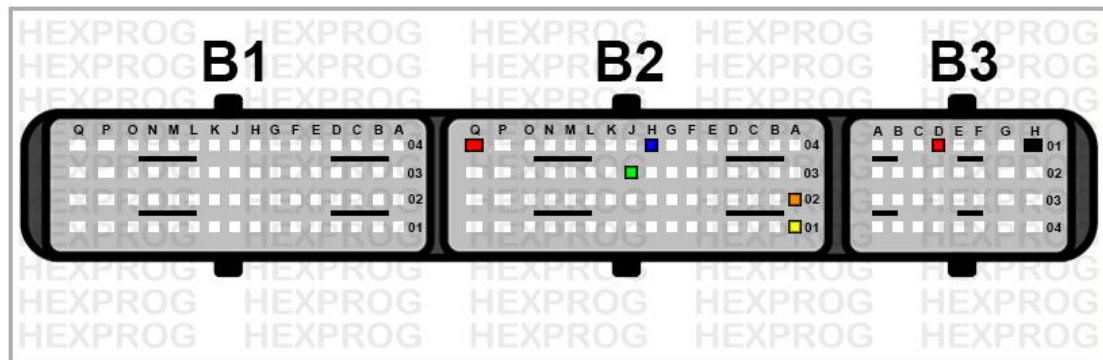

Pins Description

- Block 2-**Pin A1**: CANBUS High 2
- Block 2-**Pin A2**: CANBUS Low 2
- Block 2-**Pin H4**: Clock 1 Signal
- Block 2-**Pin J3**: Clock 2 Signal
- Block 2-**Pin Q4**: Power Supply 12-14V
- Block 3-**Pin D1**: Power Supply 12-14V
- Block 3-**Pin H1**: Ground