


Renault EDC17C84 Wiring

Connection using Factory Mode

Attention

You cannot use OBD Flash files to write into the ECU

You don't need to open EDC17C84 cover in this factory mode. Please connect wires as described below

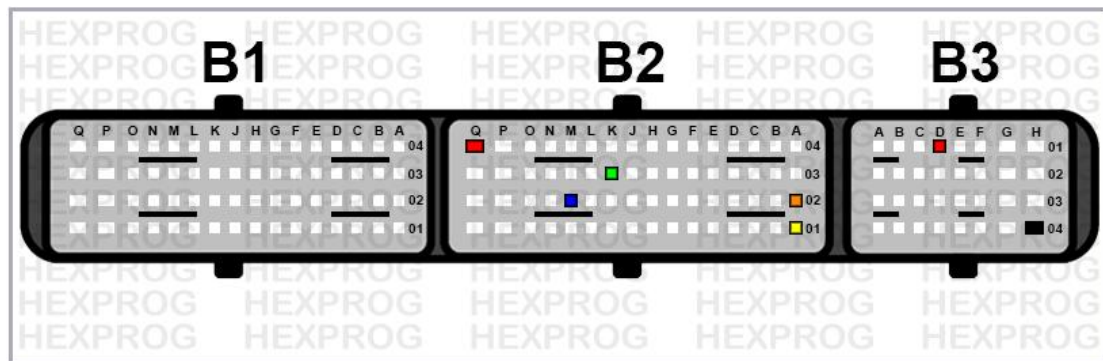

Pins Description

- Block 2-Pin **A1**: CANBUS High 2
- Block 2-Pin **A2**: CANBUS Low 2
- Block 2-Pin **K3**: Clock 2 Signal
- Block 2-Pin **M2**: Clock 1 Signal
- Block 2-Pin **Q4**: Power Supply 12-14V
- Block 3-Pin **D1**: Power Supply 12-14V
- Block 3-Pin **H4**: Ground