


# Renault EDC17CP19 Wiring

## Connection using Factory Mode

### Attention

**You cannot use OBD Flash files to write into the ECU**

You don't need to open EDC17CP19 cover in this factory mode. Please connect wires as described below

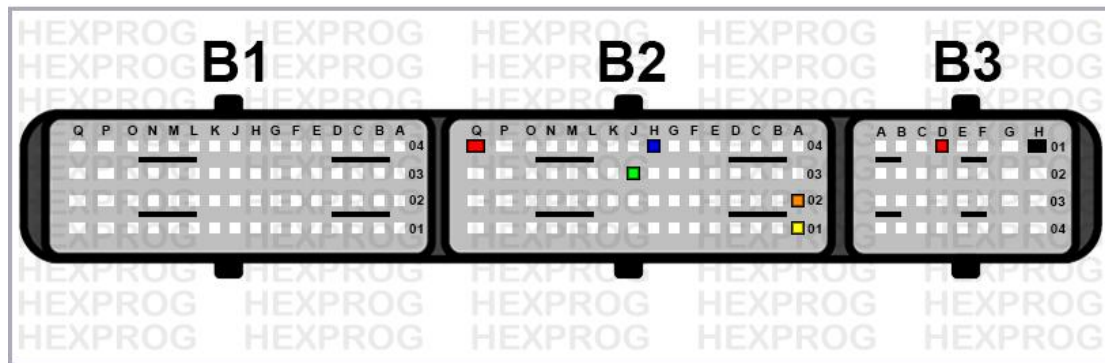

### Pins Description

- Block 2-**Pin A1**: CANBUS High 2
- Block 2-**Pin A2**: CANBUS Low 2
- Block 2-**Pin H4**: Clock 1 Signal
- Block 2-**Pin J3**: Clock 2 Signal
- Block 2-**Pin Q4**: Power Supply 12-14V
- Block 3-**Pin D1**: Power Supply 12-14V
- Block 3-**Pin H1**: Ground