

## Renault EDC17CP58 Wiring

Connection using Factory Mode


### Attention

**You cannot use OBD Flash files to write into the ECU**



Renault-EDC17CP58-Module

You don't need to open EDC17CP58 cover in this factory mode. Please connect wires as described below

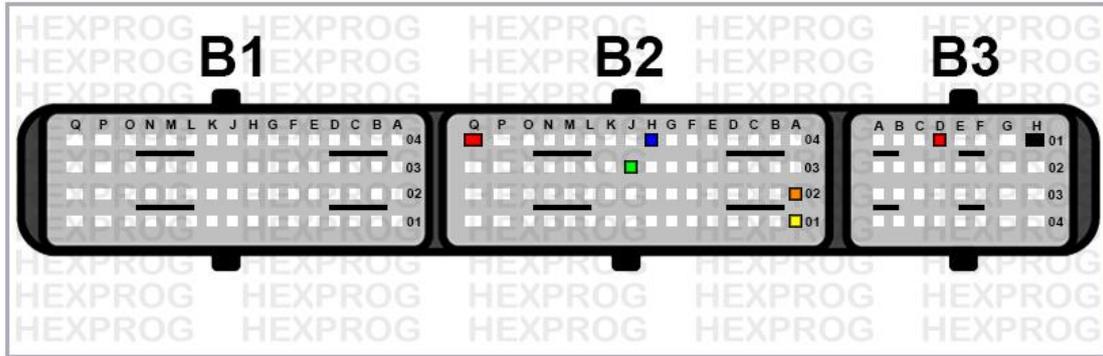

## Pins Description

- Block 2-Pin **A1**: CANBUS High 2
- Block 2-Pin **A2**: CANBUS Low 2
- Block 2-Pin **H4**: Clock 1 Signal
- Block 2-Pin **J3**: Clock 2 Signal
- Block 2-Pin **Q4**: Power Supply 12-14V
- Block 3-Pin **D1**: Power Supply 12-14V
- Block 3-Pin **H1**: Ground