

Renault Truck EMS2 E5 Wiring

Connection using Factory Mode


Attention

You cannot use OBD Flash files to write into the ECU



Renault Truck-EMS2 E5-Module

You don't need to open EMS2 E5 cover in this factory mode. Please connect wires as described below

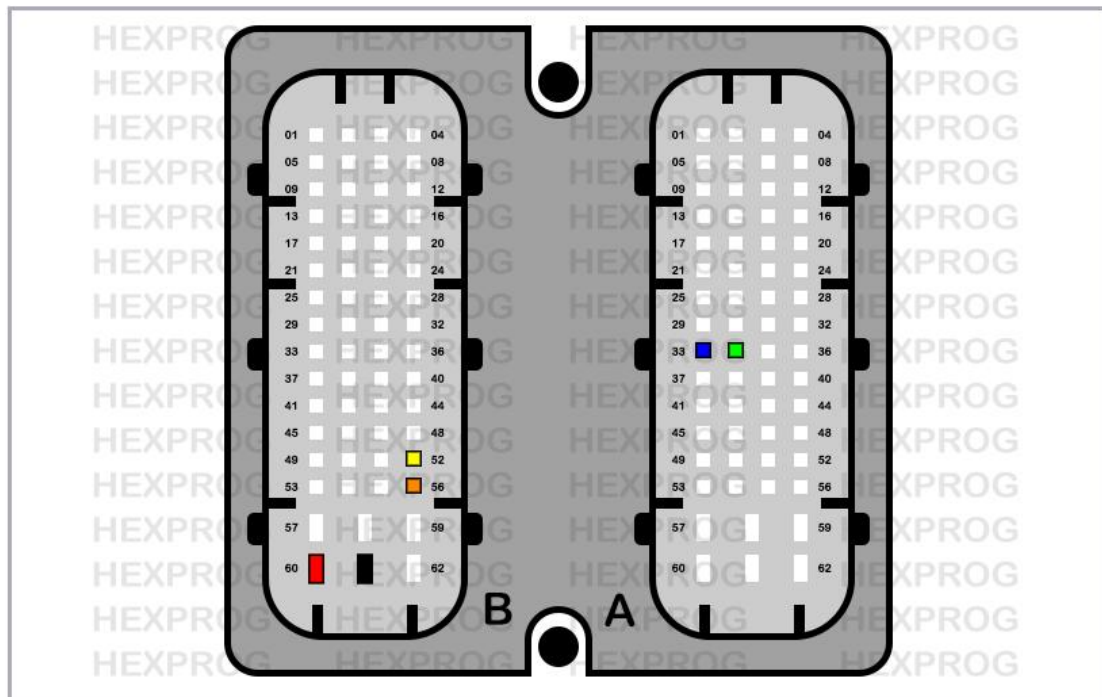

Pins Description

- Block A-**Pin 33**: Clock 1 Signal
- Block A-**Pin 34**: Clock 2 Signal
- Block B-**Pin 52**: CANBUS High 2
- Block B-**Pin 56**: CANBUS Low 2
- Block B-**Pin 60**: Power Supply 12-14V
- Block B-**Pin 61**: Ground