## Renault Truck EMS2.2 Gen2 Wiring

**Connection using Factory Mode** 


## **Attention**

## You cannot use OBD Flash files to write into the ECU



Renault Truck-EMS2.2 Gen2-Module

You don't need to open EMS2.2 Gen2 cover in this factory mode. Please connect wires as described below

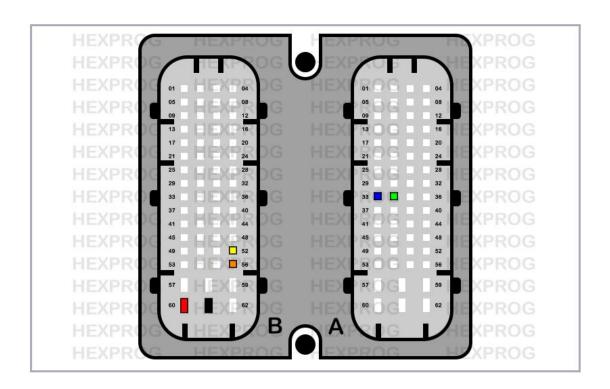

## **Pins Description**

- Block A-Pin 33: Clock 1 Signal
- Block A-Pin 34: Clock 2 Signal
- Block B-Pin 52: CANBUS High 2
- Block B-Pin 56: CANBUS Low 2
- Block B-Pin 60: Power Supply 12-14V
- Block B-Pin 61: Ground