

## Porsche DL501 Gen2 Wiring

### Connection using Factory Mode


## Attention

**You cannot use OBD Flash files to write into the ECU**



Porsche-DL501 Gen2-Module

You don't need to open DL501 Gen2 cover in this factory mode. Please connect wires as described below

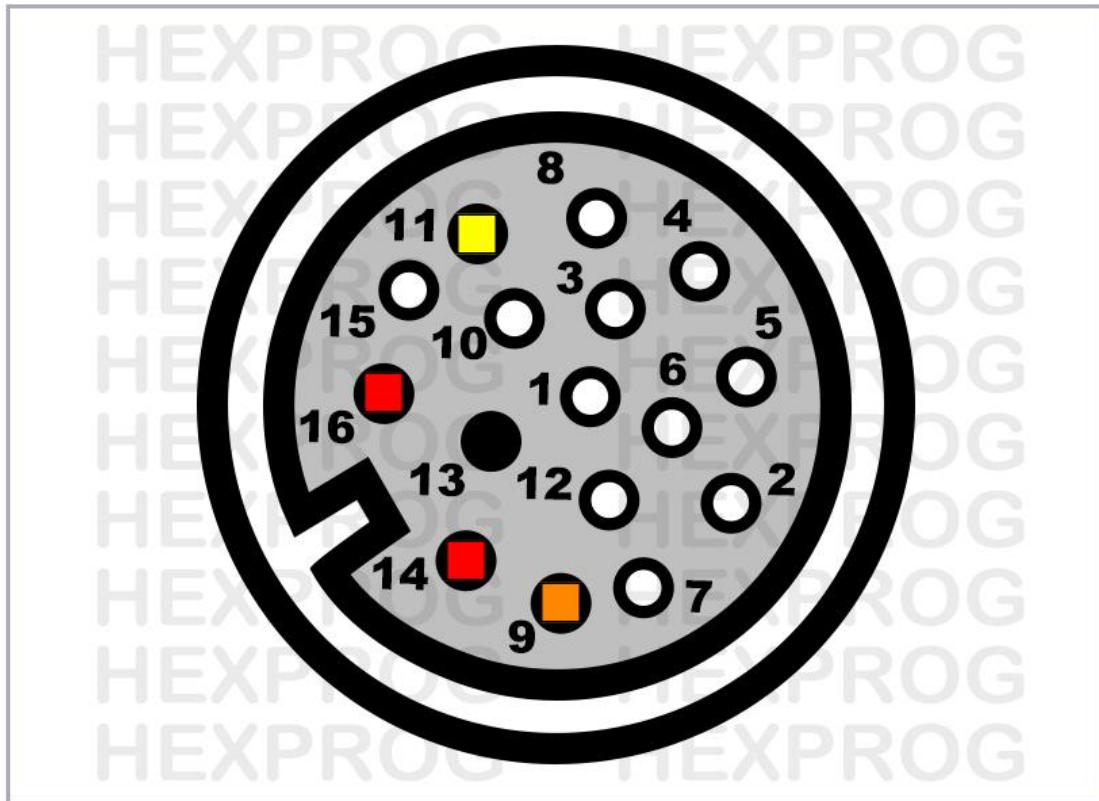

### Pins Description

- Block1-Pin 11: CANBUS High 2
- Block1-Pin 13: Ground
- Block1-Pin 14: Power Supply 12-14V
- Block1-Pin 16: Power Supply 12-14V
- Block1-Pin 9: CANBUS Low 2