


## Skoda DQ381 Wiring

### Connection using Factory Mode

## Attention

**You cannot use OBD Flash files to write into the ECU**

You don't need to open DQ381 cover in this factory mode. Please connect wires as described below

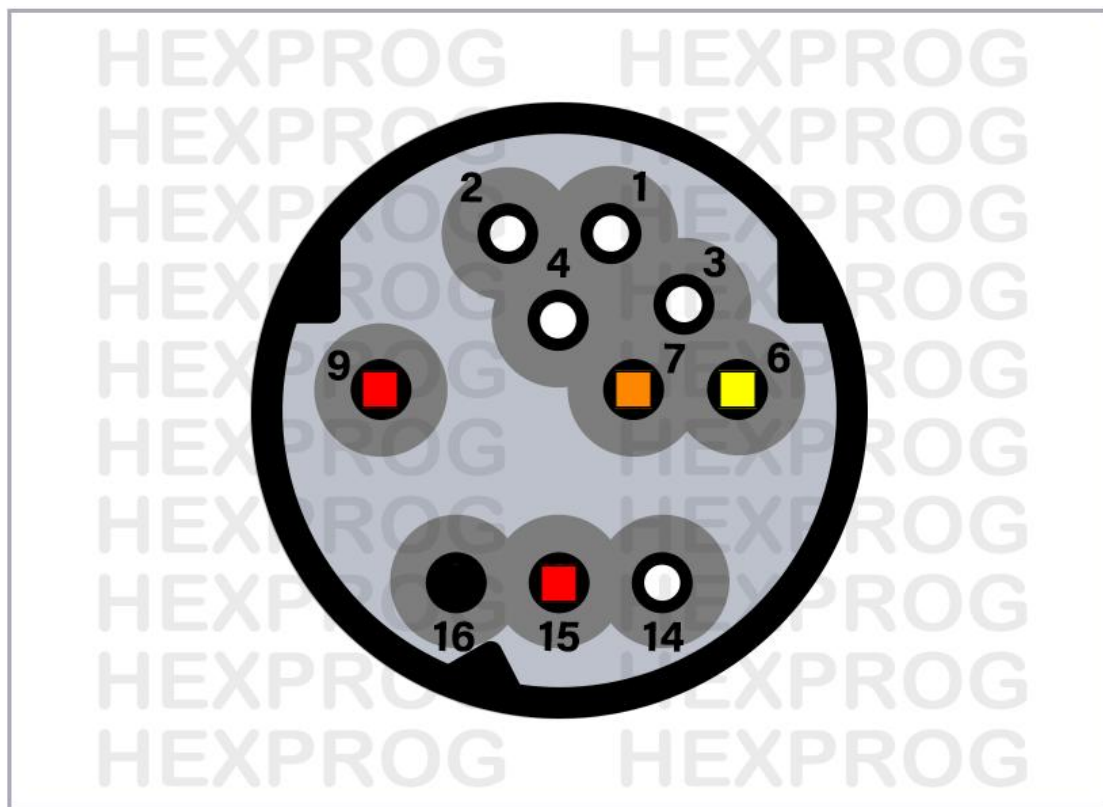

### *Pins Description*

- Block1-Pin 15: Power Supply 12-14V
- Block1-Pin 16: Ground

- Block1-**Pin 6**: CANBUS High 2
- Block1-**Pin 7**: CANBUS Low 2
- Block1-**Pin 9**: Power Supply 12-14V