

## Mercedes Truck DDE6 Wiring

### Connection using Boot Mode


## Attention

**You cannot use OBD Flash files to write into the ECU**



Mercedes Truck-DDE6-Module

You need to open DDE6 cover in boot mode. Please connect wires as described below

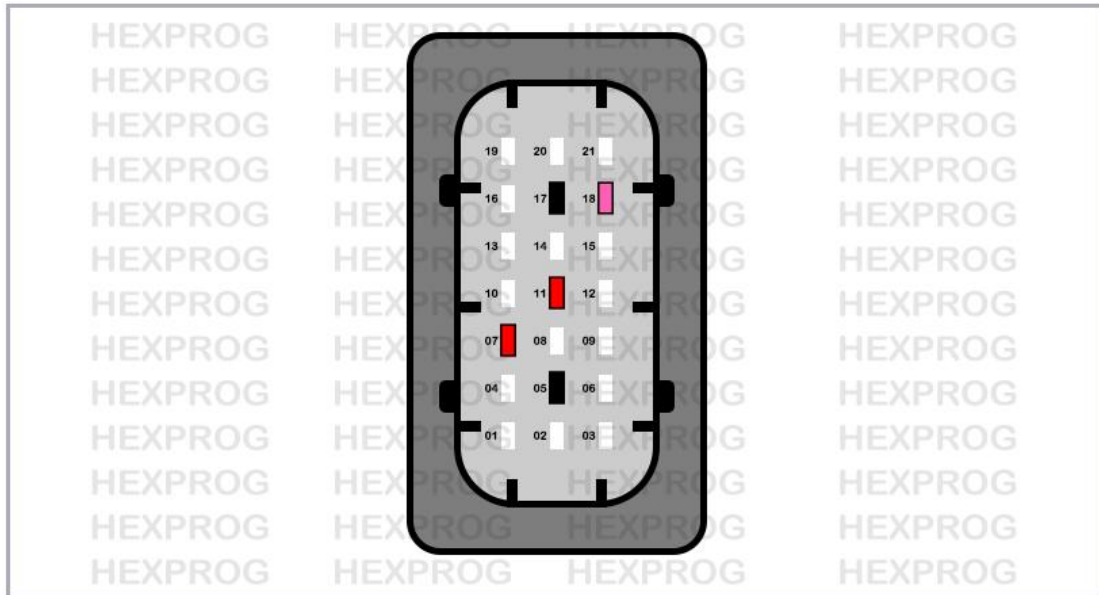

### *Pins Description*

- Block1-**Pin 05**: Ground
- Block1-**Pin 07**: Power Supply 12-14V
- Block1-**Pin 11**: Power Supply 12-14V
- Block1-**Pin 17**: Ground
- Block1-**Pin 18**: K-Line Signal

### *Internal Wiring*

Connect HexProg signals wires to DDE6 board as shown below



Mercedes Truck-DDE6-Inside



Mercedes Truck-DDE6-Boot-Location