

Volkswagen DQ200G2 Wiring

Connection using Factory Mode


Attention

You cannot use OBD Flash files to write into the ECU



Volkswagen-DQ200G2-Module

You don't need to open DQ200G2 cover in this factory mode. Please connect wires as described below

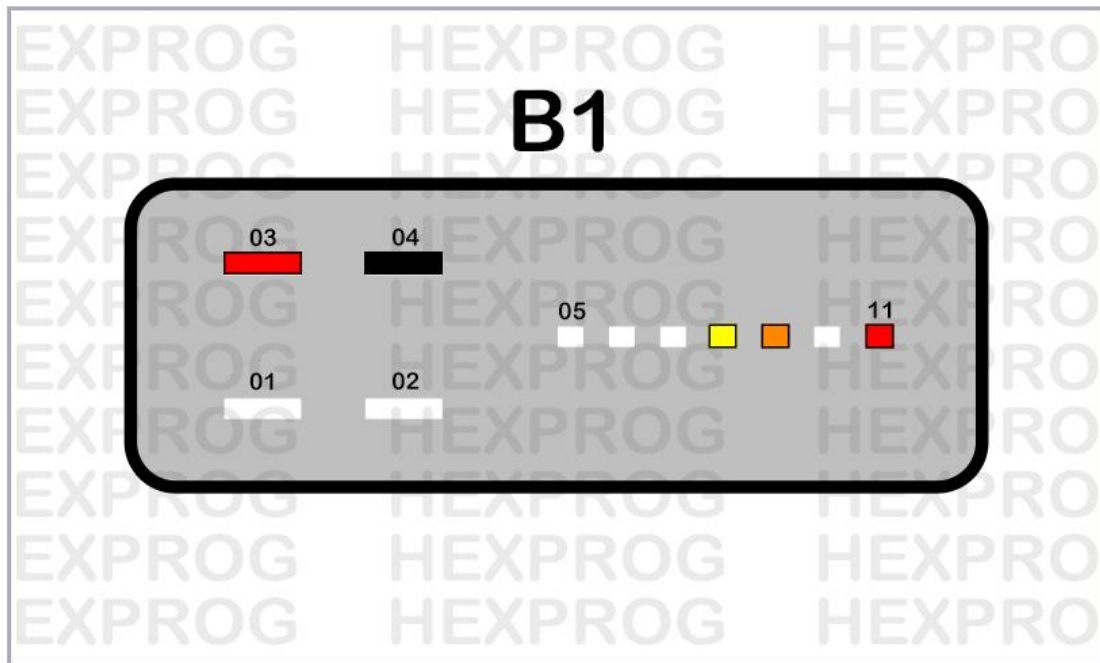

Pins Description

- Block1-**Pin 11**: Power Supply 12-14V
- Block1-**Pin 3**: Power Supply 12-14V
- Block1-**Pin 4**: Ground
- Block1-**Pin 8**: CANBUS High 2
- Block1-**Pin 9**: CANBUS Low 2