

Volkswagen DQ500 MQB Wiring

Connection using Factory Mode


Attention

You cannot use OBD Flash files to write into the ECU



Volkswagen-DQ500 MQB-Module

You don't need to open DQ500 MQB cover in this factory mode. Please connect wires as described below

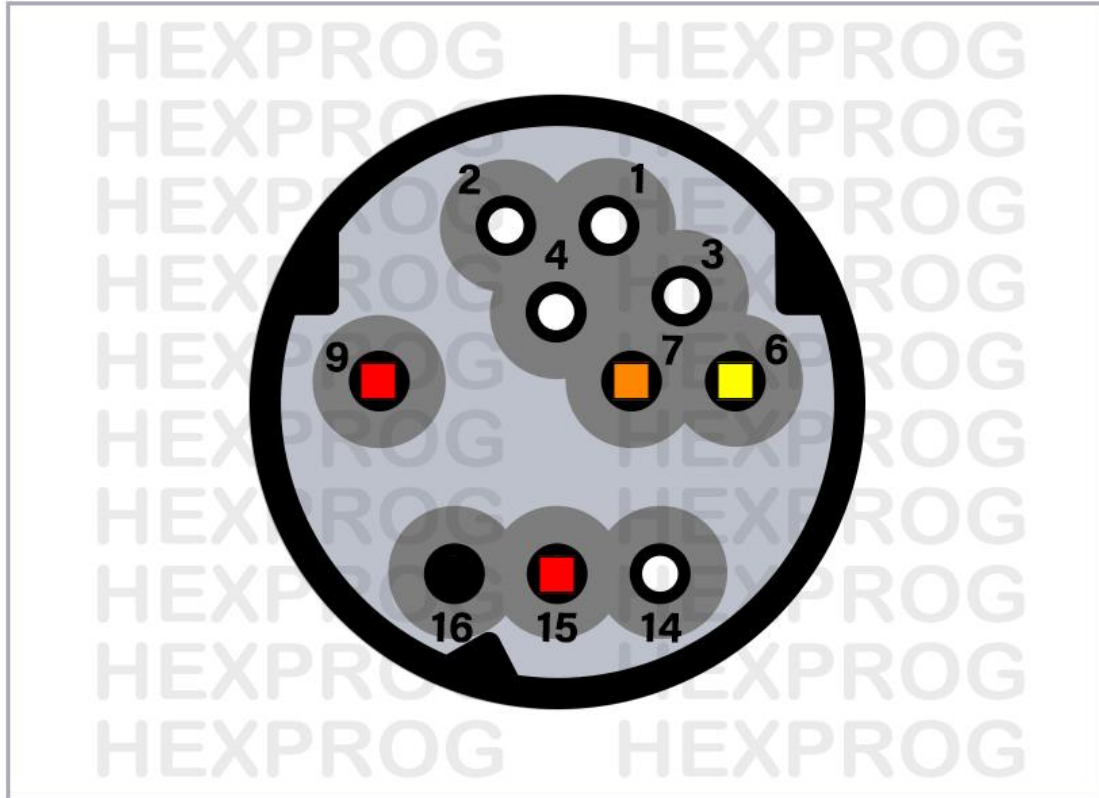

Pins Description

- Block1-Pin 15: Power Supply 12-14V
- Block1-Pin 16: Ground
- Block1-Pin 6: CANBUS High 2
- Block1-Pin 7: CANBUS Low 2
- Block1-Pin 9: Power Supply 12-14V