

Porsche DL501 Wiring

Connection using Factory Mode


Attention

You cannot use OBD Flash files to write into the ECU



Porsche-DL501-Module

You don't need to open DL501 cover in this factory mode. Please connect wires as described below

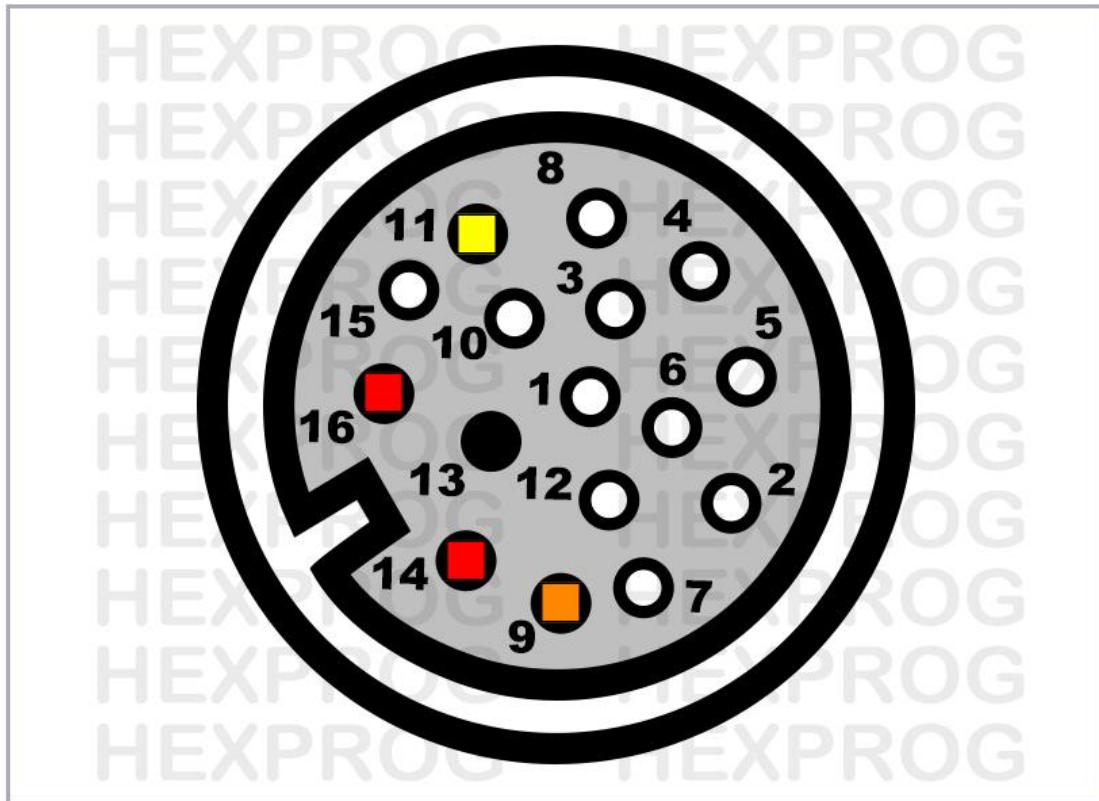

Pins Description

- Block1-Pin 11: CANBUS High 2
- Block1-Pin 13: Ground
- Block1-Pin 14: Power Supply 12-14V
- Block1-Pin 16: Power Supply 12-14V
- Block1-Pin 9: CANBUS Low 2