Volkswagen DQ200 MQB Wiring

Connection using Factory Mode


Attention

You cannot use OBD Flash files to write into the ECU



Volkswagen-DQ200 MQB-Module

You don't need to open DQ200 MQB cover in this factory mode. Please connect wires as described below

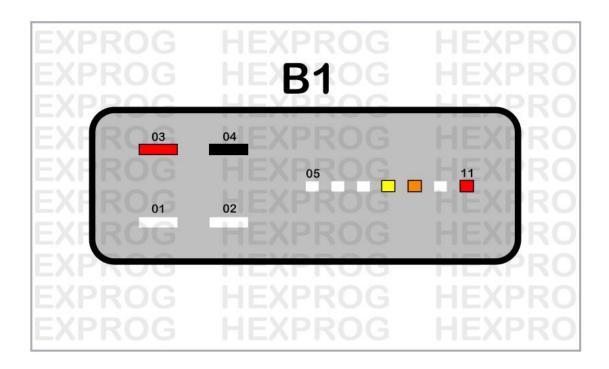

Pins Description

- Block1-Pin 11: Power Supply 12-14V
- Block1-Pin 3: Power Supply 12-14V
- Block1-Pin 4: Ground
- Block1-Pin 8: CANBUS High 2
- Block1-Pin 9: CANBUS Low 2